

**MODEL:
SP 1000 & 1200 & 1500 - 72**

**Fanless All-in-one Panel PC with 1.6 GHz Intel® Atom™ Processor,
TFT LCD, Wireless LAN, Bluetooth, Touch Screen,
RS-232/422/485 and IP 64 Protection**

Date	Version	Changes
22 December, 2010	2.00	Updated for R20 version
17 March, 2010	1.04	Added standard compliance statement
12 November, 2009	1.03	Added wall mount screw warning in page 45
5 October, 2009	1.02	Added back cover screw torque warning
19 March, 2009	1.01	Changed model name
25 February, 2009	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Standards Compliance

VCCI – CLASS A FOR SP-700-72

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

Translation:

This a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

VCCI – CLASS B FOR SP-800-72/SP-1000-72/SP-1200-72

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。 VCCI-B

Translation:

This a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

**WARNING:**

This equipment has been tested and found to comply with the limits for a Class A and Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

Packing List



NOTE:

If any of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the reseller or vendor you purchased the SP-xx00-72 series from or contact a sales representative directly.

The items listed below should all be included in the SP-xx00-72 series package.

- 1 x SP-xx00-72 series flat panel PC
- 1 x Power adapter
- 1 x Power cord
- 1 x Screw kit
- 1 x SATA and power cable
- 1 x User manual CD and driver CD
- 1 x Touch pen

Images of the above items are shown in **Chapter 3** on **page 26**.

Table of Contents

1 INTRODUCTION	1
1.1 SP-xx00-72 SERIES FLAT PANEL PC OVERVIEW	2
1.1.1 <i>Features and Model Variations</i>	2
1.1.2 <i>Applications</i>	3
1.2 EXTERNAL OVERVIEW.....	4
1.2.1 <i>General Description</i>	4
1.2.2 <i>Front Panel</i>	4
1.2.3 <i>Rear Panel</i>	4
1.2.4 <i>I/O Interface Panel</i>	5
1.2.5 <i>Top Panel and Side Panels</i>	7
1.3 INTERNAL OVERVIEW.....	7
1.4 SYSTEM SPECIFICATIONS.....	8
2 DETAILED SPECIFICATIONS	10
2.1 DIMENSIONS.....	11
2.1.1 <i>SP-700-72 Dimensions</i>	11
2.1.2 <i>SP-800-72 Dimensions</i>	12
2.1.3 <i>SP-1000-72 Dimensions</i>	13
2.1.4 <i>SP-1200-72 Dimensions</i>	14
2.2 INTEL® ATOM™ PROCESSOR.....	15
2.3 MOTHERBOARD COMPONENTS.....	15
2.3.1 <i>Memory Support</i>	15
2.3.1.1 <i>Installed Memory</i>	15
2.3.1.2 <i>Additional Memory</i>	16
2.3.2 <i>Storage Capacity</i>	16
2.4 EXTERNAL PERIPHERAL INTERFACE CONNECTORS.....	16
2.4.1 <i>Serial Port Connectors</i>	16
2.4.2 <i>LAN Connectivity</i>	17
2.4.3 <i>External USB Connectors</i>	18
2.5 SP-xx00-72 FRONT SIDE	18
2.5.1 <i>Monitor</i>	18
2.5.2 <i>Touch-Screen Module</i>	19
2.6 AUDIO	19

2.6.1 AC'97 Audio Codec Controller	19
2.6.2 Stereo Speakers	20
2.7 SYSTEM POWER	20
2.7.1 Power Mode.....	20
2.7.1.1 ATX Power Mode (Default).....	20
2.7.1.2 AT Power Mode	21
2.7.2 Power Adapter	21
2.7.3 Power Connector	21
2.8 WIRELESS CONNECTIONS	22
2.8.1 USB Bluetooth Module.....	22
2.8.2 Wireless Ethernet	22
3 UNPACKING	24
3.1 UNPACKING.....	25
3.1.1 Packing List	26
4 INSTALLATION	29
4.1 ANTI-STATIC PRECAUTIONS	30
4.2 INSTALLATION PRECAUTIONS	30
4.3 PREINSTALLED COMPONENTS.....	31
4.4 INSTALLATION AND CONFIGURATION STEPS	31
4.5 REMOVING THE BACK COVER	32
4.6 CF CARD INSTALLATION	33
4.7 HDD INSTALLATION (SP1200-72 ONLY)	34
4.8 AT/ATX MODE SELECTION.....	35
4.8.1 AT Power Mode	35
4.8.2 ATX Power Mode	36
4.9 JUMPER SETTINGS	36
4.9.1 Access the Jumpers	37
4.9.2 Preconfigured Jumpers	37
4.9.3 Clear CMOS Jumper.....	38
4.9.4 COM Port Pin 9 Select.....	39
4.9.4.1 COM3 RS-422 and RS-485 Pinouts	40
4.9.5 COM3 RX Function Select Jumper.....	41
4.9.6 COM3 TX Function Select Jumper.....	42
4.9.7 COM3 RS-232/422/485 Serial Port Select Jumper	43
4.10 MOUNTING THE SYSTEM	44
4.10.1 Wall Mounting.....	45

4.10.2 Panel Mounting.....	48
4.10.3 Arm Mounting.....	50
4.10.4 Cabinet and Rack Installation	52
4.11 BOTTOM PANEL CONNECTORS.....	54
4.11.1 LAN Connection.....	54
4.11.2 Serial Device Connection	55
4.11.3 USB Device Connection	56
5 SYSTEM MAINTENANCE.....	57
5.1 SYSTEM MAINTENANCE INTRODUCTION	58
5.2 ANTI-STATIC PRECAUTIONS.....	58
5.3 TURN OFF THE POWER.....	59
5.4 OPENING THE SYSTEM.....	59
5.4.1 Removing the Back Cover	59
5.4.2 SP-xx00-72 Series Internal Aluminum Cover Removal	60
5.5 REPLACING COMPONENTS.....	61
5.5.1 Memory Module Replacement	61
5.5.2 CF Card Replacement.....	62
5.6 REINSTALLING THE COVERS	63
6 AMI BIOS SETUP.....	64
6.1 INTRODUCTION.....	65
6.1.1 Starting Setup.....	65
6.1.2 Using Setup.....	65
6.1.3 Getting Help	66
6.1.4 Unable to Reboot After Configuration Changes	66
6.1.5 BIOS Menu Bar.....	66
6.2 MAIN.....	67
6.3 ADVANCED.....	68
6.3.1 CPU Configuration.....	69
6.3.2 IDE Configuration	70
6.3.2.1 IDE Master, IDE Slave	72
6.3.3 Super IO Configuration.....	76
6.3.4 Hardware Health Configuration.....	79
6.3.5 Power Configuration.....	82
6.3.5.1 ACPI configuration	83
6.3.6 APM Configuration.....	84
6.3.7 Remote Configuration	86

6.3.8 USB Configuration.....	89
6.4 PCI/PNP.....	91
6.5 BOOT.....	93
6.5.1 Boot Settings Configuration.....	93
6.6 SECURITY.....	96
6.7 CHIPSET.....	97
6.7.1 North Bridge Chipset Configuration.....	97
6.7.2 SouthBridge Configuration.....	100
6.8 EXIT.....	101
7 SOFTWARE DRIVERS.....	104
7.1 AVAILABLE SOFTWARE DRIVERS.....	105
7.2 STARTING THE DRIVER PROGRAM.....	105
7.3 CHIPSET DRIVER INSTALLATION.....	106
7.4 VGA DRIVER INSTALLATION.....	110
7.5 AUDIO DRIVER INSTALLATION.....	115
7.6 LAN DRIVER INSTALLATION.....	117
7.7 TOUCH SCREEN DRIVER.....	120
7.8 BLUETOOTH DRIVER.....	123
7.9 WIRELESS DRIVER.....	127
A SYSTEM SPECIFICATIONS.....	131
A.1 MOTHERBOARD SPECIFICATIONS.....	132
A.2 PROCESSOR SPECIFICATIONS.....	132
A.3 SCREEN SPECIFICATIONS.....	133
A.4 TOUCH SCREEN SPECIFICATIONS.....	134
A.5 BLUETOOTH MODULE SPECIFICATIONS.....	135
B SAFETY PRECAUTIONS.....	136
B.1 SAFETY PRECAUTIONS.....	137
B.1.1 General Safety Precautions.....	137
B.1.2 Anti-static Precautions.....	138
B.2 MAINTENANCE AND CLEANING PRECAUTIONS.....	138
B.2.1 Maintenance and Cleaning.....	138
B.2.2 Cleaning Tools.....	139
C BIOS CONFIGURATION OPTIONS.....	140
C.1 BIOS CONFIGURATION OPTIONS.....	141

D WATCHDOG TIMER 144

E HAZARDOUS MATERIALS DISCLOSURE..... 147

 E.1 HAZARDOUS MATERIAL DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS
 ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY 148

F INDEX 151

List of Figures

Figure 1-1: SP-xx00-72 Flat Panel PC	2
Figure 1-2: SP-xx00-72 Front View	4
Figure 1-3: SP-xx00-72 Rear View	5
Figure 1-4: SP-xx00-72 I/O Interface Connector Panel	6
Figure 1-5: SP-xx00-72 Top View	7
Figure 1-6: SP-1000-72 Side View	7
Figure 2-1: SP-700-72 Dimensions (mm).....	11
Figure 2-2: SP-800-72 Dimensions (mm).....	12
Figure 2-3: SP-1000-72 Top and Bottom Panel Dimensions (mm)	13
Figure 2-4: SP-1200-72 Top and Bottom Panel Dimensions (mm)	14
Figure 2-5: Preinstalled DDR2 SO-DIMM	16
Figure 2-6: COM Ports.....	17
Figure 2-7: RJ-45 Ethernet Connectors.....	17
Figure 2-8: External USB Ports	18
Figure 2-9: LCD Screen.....	19
Figure 2-10: Audio Jack	19
Figure 2-11: Stereo Speakers	20
Figure 2-12: Power Connector	21
Figure 2-13: PIFA Antenna and Wireless Module.....	23
Figure 4-1: Back Cover Retention Screws	32
Figure 4-2: SP-xx00-72 Plastic Back Cover Removal	32
Figure 4-3: CF Card Location	33
Figure 4-4: SP-800-72 Plastic Back Cover Replacement	33
Figure 4-5: AF-12A-N270 HDD Retention Screws.....	34
Figure 4-6: AT/ATX Switch Location.....	35
Figure 4-7: Clear CMOS Jumper	39
Figure 4-8: COM1 and COM3 Pin 9 Setting Jumper Locations.....	40
Figure 4-9: COM3 RX Function Select Jumper Location.....	41
Figure 4-10: COM3 TX Function Select Jumper Pinout Locations.....	42
Figure 4-11: COM3 RS-232/422/485 Serial Port Select Jumper Location.....	44
Figure 4-12: Wall-mounting Bracket	45
Figure 4-13: Chassis Support Screws	47
Figure 4-14: Secure the Panel PC	47

Figure 4-15: SP-700-72 Panel Opening.....	48
Figure 4-16: SP-800-72 Panel Opening.....	48
Figure 4-17: SP-1000-72 Panel Opening.....	49
Figure 4-18: SP-1200-72 Panel Opening.....	49
Figure 4-19: Tighten the Panel Mounting Clamp Screws	50
Figure 4-20: SP-700-72/SP-800-72 Arm Mounting Retention Screw Holes	51
Figure 4-21: SP-1000-72/SP-1200-72 Arm Mounting Retention Screw Holes	51
Figure 4-22: The Rack/Cabinet Bracket.....	52
Figure 4-23: Secure the Rack/Cabinet Bracket (SP-1000-72/SP-1200-72)	53
Figure 4-24: Install into a Rack/Cabinet	53
Figure 4-25: LAN Connection	54
Figure 4-26: Serial Device Connector	55
Figure 4-27: USB Device Connection	56
Figure 5-1: Back Cover Retention Screws	60
Figure 5-2: SP-xx00-72 Plastic Back Cover Removal	60
Figure 5-3: SP-1000-72 Aluminum Back Cover Retention Screws	61
Figure 5-4: SP-1000-72 SO-DIMM Socket Location	61
Figure 5-5: DDR SO-DIMM Module Installation.....	62
Figure 7-1: Drivers.....	105
Figure 7-2: Chipset Driver Screen.....	106
Figure 7-3: Chipset Driver Welcome Screen.....	107
Figure 7-4: Chipset Driver License Agreement	108
Figure 7-5: Chipset Driver Read Me File	108
Figure 7-6: Chipset Driver Setup Operations	109
Figure 7-7: Chipset Driver Installation Finish Screen.....	110
Figure 7-8: VGA Driver Read Me File.....	111
Figure 7-9: VGA Driver Setup Files Extracted	111
Figure 7-10: VGA Driver Welcome Screen	112
Figure 7-11: VGA Driver License Agreement.....	113
Figure 7-12: VGA Driver Read Me File.....	113
Figure 7-13: VGA Driver Setup Operations.....	114
Figure 7-14: VGA Driver Installation Finish Screen	114
Figure 7-15: Audio Driver Options	115
Figure 7-16: AC'97 Driver Installation Welcome Screen.....	116
Figure 7-17: AC'97 Driver Installation Verification	116
Figure 7-18: AC'97 Driver Installation.....	117
Figure 7-19: AC'97 Driver Installation Complete	117

Figure 7-20: LAN Driver Welcome Screen	118
Figure 7-21: LAN Driver Welcome Screen	119
Figure 7-22: LAN Driver Installation	119
Figure 7-23: LAN Driver Installation Complete.....	120
Figure 7-24: Welcome Screen	121
Figure 7-25: License Agreement	121
Figure 7-26: Ready to Install the Program	122
Figure 7-27: Installing PenMount DMC9000.....	122
Figure 7-28: Reboot the Computer	123
Figure 7-29: Bluetooth Driver Icon.....	123
Figure 7-30: Welcome Screen	124
Figure 7-31: License Agreement	124
Figure 7-32: Bluetooth Driver Setup Options	125
Figure 7-33: Bluetooth Driver Destination Folder	125
Figure 7-34: Ready to Install the Program	126
Figure 7-35: Installing BlueSoleil	126
Figure 7-36: Bluetooth Driver Complete Installation Screen	127
Figure 7-37: Reboot the Computer	127
Figure 7-38: Wireless Driver OS Folders.....	128
Figure 7-39: Wireless Driver License Agreement.....	128
Figure 7-40: Wireless Driver Configuration Tool Options.....	129
Figure 7-41: Wireless Mode Select Window	129
Figure 7-42: Wireless Driver Installation	130

List of Tables

Table 1-1: Model Variations	3
Table 1-2: SP-xx00-72 Series System Specifications	9
Table 4-1: Jumpers	37
Table 4-2: Preconfigured Jumpers	37
Table 4-3: Clear CMOS Jumper Settings.....	38
Table 4-4: COM1 Pin 9 Setting Jumper Settings	39
Table 4-5: COM3 Pin 9 Setting Jumper Settings	39
Table 4-6: RS-422 Pinouts	40
Table 4-7: RS-485 Pinouts	40
Table 4-8: COM3 RX Function Select Jumper Settings	41
Table 4-9: COM3 TX Function Select Jumper Settings.....	42
Table 4-10: COM3 RS-232/422/485 Serial Port Select Jumper Settings	43
Table 6-1: BIOS Navigation Keys	66

Chapter

1

Introduction

1.1 SP-xx00-72 Series Flat Panel PC Overview



Figure 1-1: SP-xx00-72 Flat Panel PC

The SP-xx00-72 series is Intel® Atom™ powered flat panel PCs with a rich variety of functions and peripherals. All SP-xx00-72 models are designed for easy and simplified integration in to kiosk and point-of-sales (POS) applications.

An Intel® 945GSE graphics memory controller hub (GMCH) coupled with an Intel® ICH7-M input/output controller hub ensures optimal memory, graphics, and peripheral I/O support. The system comes with 1.0 GB of preinstalled DDR2 SDRAM and supports a maximum of 2.0 GB of DDR2 SDRAM ensuring smooth data throughputs with reduced bottlenecks and fast system access.

Two serial ports and two external USB 2.0 ports ensure simplified connectivity to a variety of external peripheral devices. Wi-Fi capabilities and an RJ-45 Ethernet connector ensure smooth connection of the system to an external LAN.

1.1.1 Features and Model Variations

There are four models in the SP-xx00-72 series. Both models feature the following:

- Intel® Atom™ processor
- Intel® 945GSE chipset

- 1GB 533 MHz DDR2 SDRAM preinstalled
- 802.11 b/g wireless module
- Two USB 2.0 ports
- Watchdog timer that triggers a system reset if the system hangs for some reason
- IP 64 compliant front panel
- AT or ATX power mode
- Touch screen
- Bluetooth
- RoHS compliance

There are four kinds of panel size of the SP-xx00-72 series. The model numbers and model variations are listed below.

Model	Size	Brightness	Resolution	HSUPA
SP-700-72/R/1G-R20	7"	400 cd/m ²	800 x 480	No
SP-800-72/R/1G-R20	8.4"	450 cd/m ²	800 x 600	No
SP-1000-72/R/1G-R20	10.4"	400 cd/m ²	800 x 600	No
SP-1000-72/RH/1G-R20	10.4"	400 cd/m ²	800 x 600	Yes
SP-1200-72/R/1G-R20	12.1"	500 cd/m ²	1024 x 768	No
SP-1200-72/RH/1G-R20	12.1"	500 cd/m ²	1024 x 768	Yes

Table 1-1: Model Variations

1.1.2 Applications

The SP-xx00-72 panel PCs are elegant yet sophisticated systems that are easily implemented in commercial environments, industrial environments and corporate environments.

1.2 External Overview

1.2.1 General Description

The stylish SP-xx00-72 panel PC comprises of a screen, rear panel, top panel, bottom panel and two side panels (left and right). An ABS/PC plastic front frame surrounds the front screen. The rear panel provides screw holes for a wall-mounting bracket compliant with VESA FDMI standard. An I/O interface panel on the bottom panel of the SP-xx00-72 provides access to external interface connectors that include LAN, USB 2.0, serial port, reset button, power connector and power switch.

1.2.2 Front Panel

The front side of the SP-xx00-72 series is a flat panel TFT LCD screen with LED backlight surrounded by an ABS/PC plastic frame. The top of the front panel has a power LED.

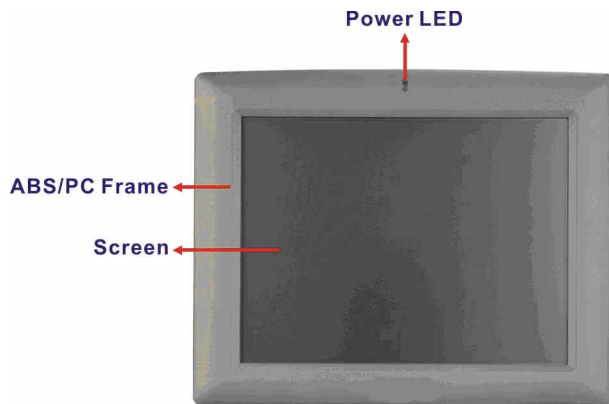


Figure 1-2: SP-xx00-72 Front View

1.2.3 Rear Panel

The rear panel provides access to retention screw holes that support the wall mounting. Refer to **Figure 1-3**.

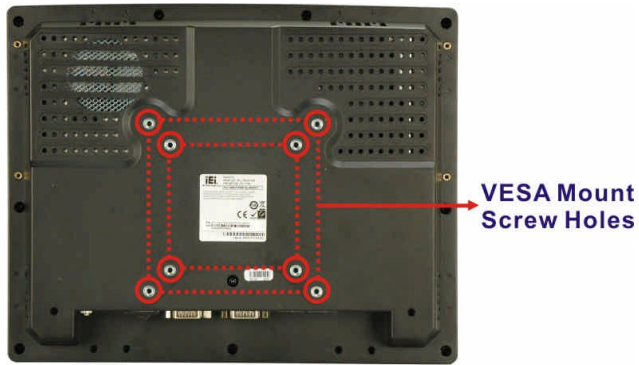


Figure 1-3: SP-xx00-72 Rear View

1.2.4 I/O Interface Panel

The I/O interface panel located on the bottom of the SP-xx00-72 has the following I/O interface connectors:

- 1 x Audio connector
- 1 x 12 V DC In connector
- 1 x External SATA connector
- 1 x RS-232 connector
- 1 x RS-232/422/485 connector
- 2 x LAN connectors
- 2 x USB 2.0 connectors
- 1 x Power switch
- 1 x Reset button

The external I/O interface connector panel is shown in **Figure 1-4**.

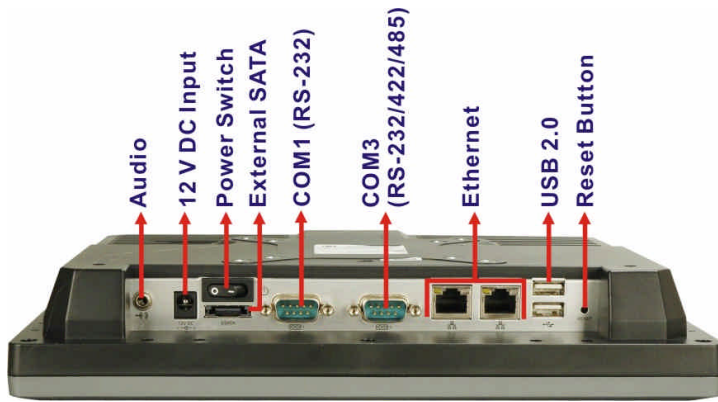


Figure 1-4: SP-xx00-72 I/O Interface Connector Panel

1.2.5 Top Panel and Side Panels

The top panel and side panels of SP-xx00-72 series provides access to slots that support panel mount and rack mount (**Figure 1-5**).



Figure 1-5: SP-xx00-72 Top View



Figure 1-6: SP-1000-72 Side View

1.3 Internal Overview

The SP-xx00-72 has the following components installed internally:

- 1 x Motherboard
- 1 x 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM
- 1 x Wireless module
- 1 x Bluetooth module

1.4 System Specifications

The technical specifications for the SP-xx00-72 series systems are listed in Table 1-2.

Specification	SP-700-72	SP-800-72	SP-1000-72	SP-1200-72
LCD Size	7"	8.4"	10.4"	12.1"
Max. Resolution	800 x 480	800 x 600	800 x 600	1024 x 768
Contrast Ratio	400:1	600:1	700:1	700:1
Brightness (cd/m²)	400	450	400	500
LCD Color	262K	262K	262K	262K
Pixel Pitch (H x V) (mm)	0.0635 x 0.1905	0.213 x 0.213	0.264 x 0.264	0.3057 x 0.3057
Viewing Angle (H-V)	140 / 110	160 / 140	160 / 140	160 / 160
Backlight	LED backlight	LED backlight	LED backlight	LED backlight
SBC Model	AFLMB-945GSE			
CPU	1.6 GHz Intel® Atom™ N270 processor			
GMCH	Intel® 945GSE			
Memory	One 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM pre-installed (Supports up to 2 GB 533/400 MHz DDR2 SDRAM)			
SSD	CF Type II slot			
Watchdog Timer	Software Programmable supports 1 sec. ~ 255 sec. system reset			
Audio	AMP 1.5 W + AMP 1.5 W (built-in stereo speakers)			
Expansion	1 x PCIe mini card (wireless LAN 802.11 b/g module)			
	1 x Bluetooth module (USB interface, Bluetooth v 2.0)			
HDD Drive Bay	1 x 2.5" SATA HDD bay or HSDPA module (SP-1200-72 Only)			
Construction Material	ABS + PC plastic front frame			
Mounting	Panel Wall Stand Arm (VESA 75 mm x 75 mm or 100 mm x 100 mm)			
Front Panel Color	Gray 7539U			
Dimensions (W x H x D) (mm)	226 x 140 x 40.18	234 x 184 x 41.09	276 x 227 x 50.7	304 x 246 x 49.5

Operation Temperature	-10°C ~ 50°C with CF card			-10°C ~ 50°C with CF card 0°C ~ 40°C with HDD
Storage Temperature	-20°C ~ 60°C			
Net weight	0.6 kg	0.8 kg	1.4 kg	1.8 kg
IP level (front panel)	IP 64			
EMC	CE, FCC and CCC			
Safety	CB			
Touch Screen	Resistive Type 4-wire (touch controller is on board)		Resistive Type 5-wire (touch controller is on board)	
Power Adapter	36 W		50 W	
	Input: 90 VAC ~ 264 VAC @ 50 Hz / 60 Hz			
	Output: 12 V DC			
Power Consumption	23 W	25 W	28 W	32 W
I/O Ports and Switches	1 x 12 V DC input jack			
	1 x Audio connector			
	1 x RS-232 COM port connectors			
	1 x RS-232/422/485 COM port connector			
	2 x RJ-45 for LAN			
	2 x USB 2.0 ports			
	1 x Power switch			
	1 x Reset button			

Table 1-2: SP-xx00-72 Series System Specifications

Chapter

2

Detailed Specifications

2.1 Dimensions

The following sections provide detailed schematics and information on the dimensions of the SP-xx00-72 series.

2.1.1 SP-700-72 Dimensions

The SP-700-72 dimensions are shown in **Figure 2-1** and listed below.

- **Width:** 226.00 mm
- **Height:** 140.00 mm
- **Depth:** 40.18 mm

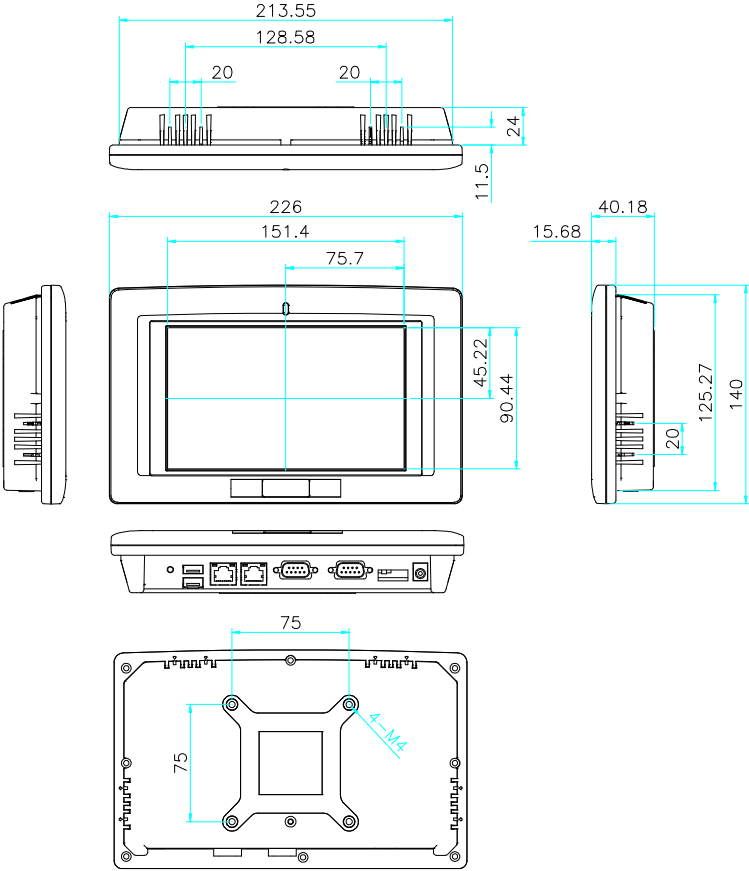


Figure 2-1: SP-700-72 Dimensions (mm)

2.1.2 SP-800-72 Dimensions

The SP-800-72 dimensions are shown in **Figure 2-2** and listed below.

- **Width:** 233.86 mm
- **Height:** 183.86 mm
- **Depth:** 41.09 mm

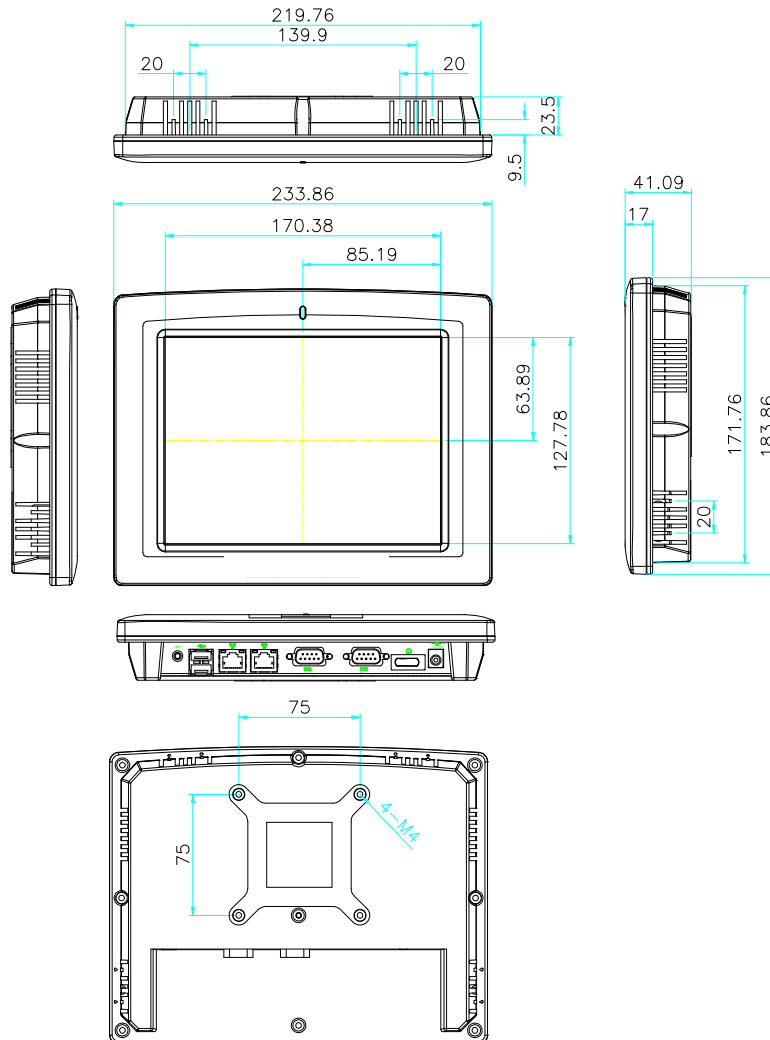


Figure 2-2: SP-800-72 Dimensions (mm)

2.1.3 SP-1000-72 Dimensions

The SP-1000-72 dimensions are shown in **Figure 2-3** and listed below.

- **Width:** 276.0 mm
- **Height:** 222.0 mm
- **Depth:** 51.0 mm

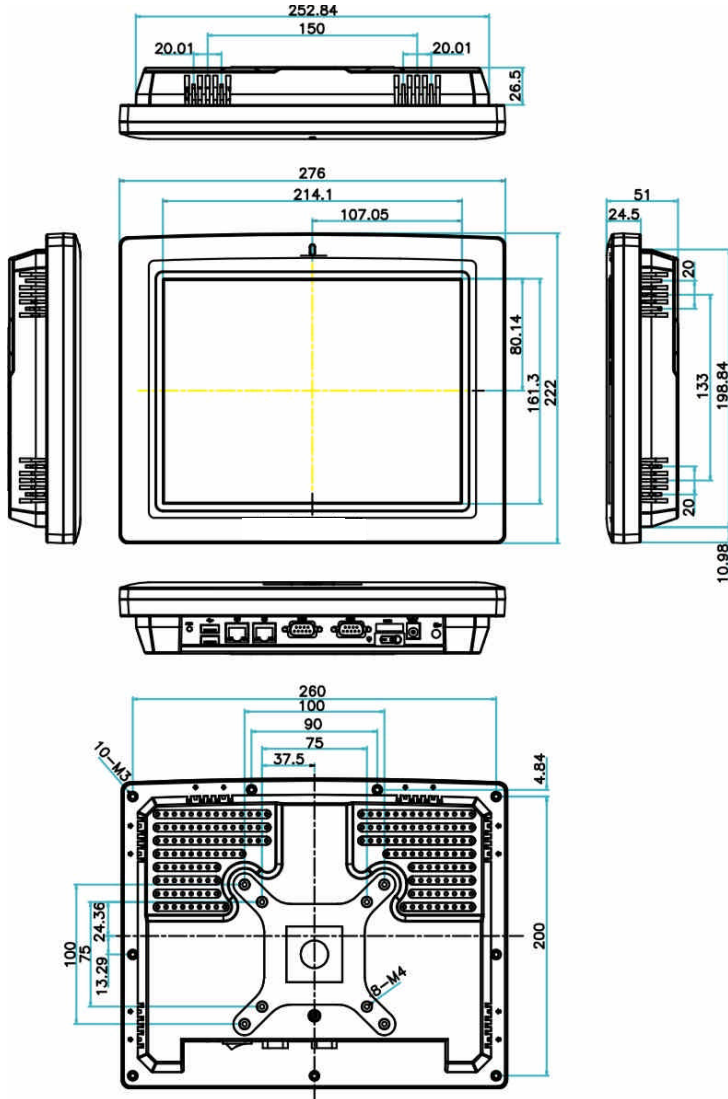


Figure 2-3: SP-1000-72 Top and Bottom Panel Dimensions (mm)

2.1.4 SP-1200-72 Dimensions

The SP-1200-72 dimensions are shown in **Figure 2-3** and listed below.

- **Width:** 304.0 mm
- **Height:** 246.0 mm
- **Depth:** 49.5 mm

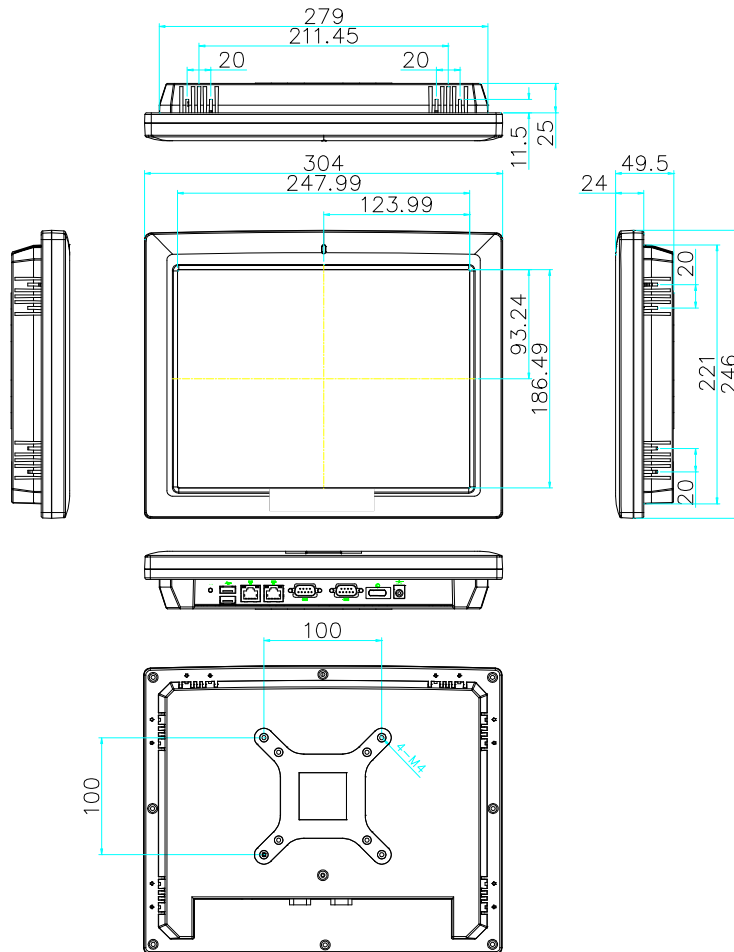


Figure 2-4: SP-1200-72 Top and Bottom Panel Dimensions (mm)

2.2 Intel® Atom™ Processor

A 45nm N270 Intel® Atom™ processor is installed in the system. The processor has a CPU speed of 1.6 GHz and a 533 MHz front side bus (FSB). The processor also comes with a 512 KB L2 cache and a 1.6 GHz L2 cache speed. Some of the features of the Intel® Atom™ processor are listed below:

- On-die, primary 32-kB instructions cache and 24-kB write-back data cache
- 533-MHz source-synchronous front side bus (FSB)
- 2-Threads support
- On-die 512-kB, 8-way L2 cache
- Support for IA 32-bit architecture
- Intel® Streaming SIMD Extensions-2 and -3 (Intel® SSE2 and Intel® SSE3) support and Supplemental Streaming SIMD Extension 3 (SSSE3) support
- Micro-FCBGA8 packaging technologies
- Thermal management support via Intel® Thermal Monitor 1 and Intel Thermal Monitor 2
- FSB Lane Reversal for flexible routing
- Supports C0/C1(e)/C2(e)/C4(e)
- L2 Dynamic Cache Sizing
- Advanced power management features including Enhanced Intel SpeedStep® Technology
- Execute Disable Bit support for enhanced security

2.3 Motherboard Components

The following sections describe some of the features on the motherboard.

2.3.1 Memory Support

2.3.1.1 Installed Memory

One 200-pin 1.0 GB 533 MHz DDR2 SDRAM SO-DIMM is installed in the SP-xx00-72 and controlled by the Intel® 945GSE GMCH installed on the internal motherboard.

Preinstalled 1.0 GB 533 MHz DDR2 SO-DIMM

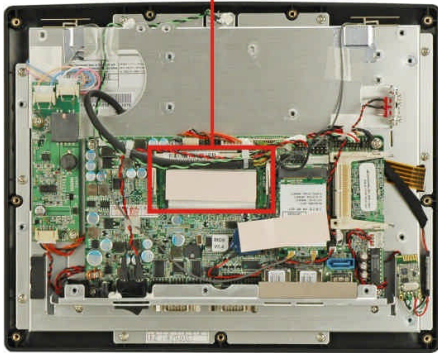


Figure 2-5: Preinstalled DDR2 SO-DIMM

2.3.1.2 Additional Memory

The Intel® 945GSE is capable of supporting one 200-pin 2.0 GB (max.) 533 MHz or 400 MHz DDR2 SDRAM SO-DIMM. If additional memory is required, please contact a sales representative and discuss the necessary system requirement.

2.3.2 Storage Capacity

The SP-xx00-72 series supports an easily installed CompactFlash® Type II (CF Type II) memory disk. The SP-xx00-72 also supports a SATA drive through the external SATA connector on the bottom panel.

The SP-1200-72 model can also support either an internal 2.5" SATA hard disk drive or a HSDPA module.

2.4 External Peripheral Interface Connectors

The following section describes the external peripheral interface connectors on the bottom panel of the subsystem.

2.4.1 Serial Port Connectors

The SP-xx00-72 has two serial ports. One of these ports (COM1) is RS-232 only port. The other serial port (COM3) can be configured as a RS-232, RS-422 or an RS-485 serial port. Pin 9 on both ports can be set as the normal ring (RI) signal or can be designated as a 5 V

or 12 V power supply. Enabling COM devices to be powered through the COM port eliminates unnecessary and messy cabling.

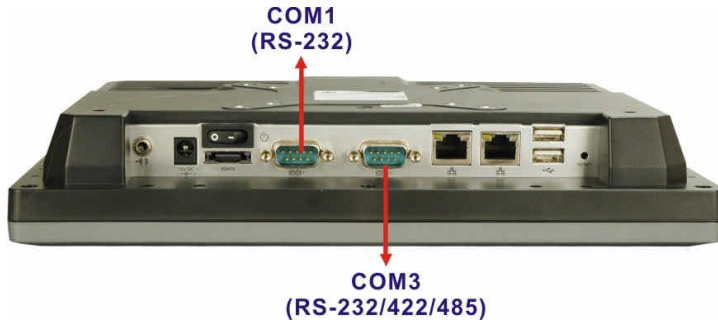


Figure 2-6: COM Ports

2.4.2 LAN Connectivity

The SP-xx00-72 has two RJ-45 LAN connectors on the bottom panel.



Figure 2-7: RJ-45 Ethernet Connectors

The PCIe lane from the Intel® ICH7 chipset of the SP-xx00-72 is interfaced to the Realtek RTL8111CP PCIe gigabit Ethernet (GbE) controllers. The RTL8111CP controllers are then connected directly to the RJ-45 connectors on the bottom panel and provides external GbE connectivity. Some of the RTL8111CP controller features are listed below:

- Integrated 10/100/1000 transceiver
- Supports PCI Express™ 1.1
- Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab
- Supports IEEE 802.1P Layer 2 Priority Encoding

- Supports IEEE 802.1Q VLAN tagging
- Serial EEPROM
- Transmit/Receive on-chip buffer support
- 64-pin QFN package (Green package)

2.4.3 External USB Connectors

There are two USB 2.0 connectors on the bottom panel of the SP-xx00-72. Both USB 2.0 connectors are interfaced directly to the USB controllers on the ICH7-M southbridge. These USB connectors are fully compliant with USB specification Revision 2.0 and USB specification Revision 1.1 and can be interfaced to both USB 1.1 and USB 2.0 compliant devices.



Figure 2-8: External USB Ports

2.5 SP-xx00-72 Front Side

2.5.1 Monitor

A LCD screen is installed on the front of the SP-xx00-72 series. The monitor maximum resolution is varied in different SP-xx00-72 models. The screen is shown in **Figure 2-9** below.

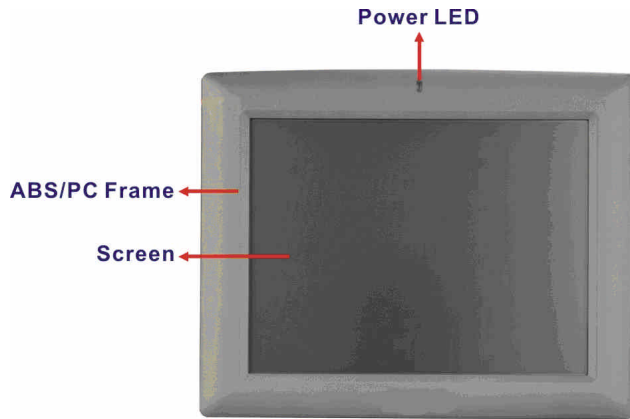


Figure 2-9: LCD Screen

2.5.2 Touch-Screen Module

A controller for the 4-wire/5-wire resistive touch screen is installed on the motherboard. The sensitive touch screen is accurate, reliable and durable.

2.6 Audio

2.6.1 AC'97 Audio Codec Controller

The integrated AC'97 Audio compliant audio controller on the Intel® ICH7 Southbridge is integrated to a RealTek ALC655 audio codec. The RealTek ALC655 is connected to an external audio jack, which is then connected to compliant audio devices. The RealTek ALC655 is a 16-bit AC-'97 Rev. 2.3 compatible six-channel audio codec. The audio connector is shown in **Figure 2-10**.



Figure 2-10: Audio Jack

2.6.2 Stereo Speakers

Two internal 1.5 W stereo speakers on the sides of the SP-xx00-72 are interfaced to the system through a Philips TDA1517p integrated class-B dual output amplifier.



Figure 2-11: Stereo Speakers

2.7 System Power

2.7.1 Power Mode

The system can be run in the AT power mode or the ATX power mode. Both these power modes are described below.

2.7.1.1 ATX Power Mode (Default)

With the ATX mode selected, the SP-xx00-72 panel PC goes in a standby mode when it is turned off. The panel PC can be easily turned on via network or a power switch in standby mode. Remote power control is perfect for advertising applications since the broadcasting time for each panel PC can be set individually and controlled remotely. Other possible application includes

- Security surveillance
- Point-of-Sale (POS)
- Advertising terminal

2.7.1.2 AT Power Mode

With the AT mode selected, the power is controlled by a central power unit rather than a power switch. The SP-xx00-72 panel PC turns on automatically when the power is connected. The AT mode benefits a production line to control multiple panel PCs from a central management center and other applications including:

- ATM
- Self-service kiosk
- Plant environment monitoring system
- Factory automation platform
- Manufacturing shop flow

2.7.2 Power Adapter

The system is shipped with a 90 V to 264 V AC power adapter that has a maximum power output of 36 W (the SP-1200-72 comes with a 50 W power adapter). The power adapter has a 12 V DC output connector.

2.7.3 Power Connector

There is one 12 V power input connector on the bottom panel. The power connector is shown in **Figure 2-12** below.



Figure 2-12: Power Connector

2.8 Wireless Connections

The following section describes the wireless modules on the circuit.

2.8.1 USB Bluetooth Module

An integrated Bluetooth module is connected to ICH7 chipset through the USB bus. The SP-xx00-72 Bluetooth module enables wireless communications between the SP-xx00-72 and various peripheral devices through a Bluetooth network. The peripheral devices may include:

- Headsets
- Barcode readers
- PDA
- Printers
- Cell phones
- Keyboard and mouse

The technical specifications of the Bluetooth module are listed in the Appendix.

2.8.2 Wireless Ethernet

An integrate PIFA antenna on the SP-xx00-72 ensures an uninterrupted wireless connection. PIFA antennas can receive high-quality, uniform signals in any location from all directions without any signal degradation or impedance and are the most efficient antennas on the market.

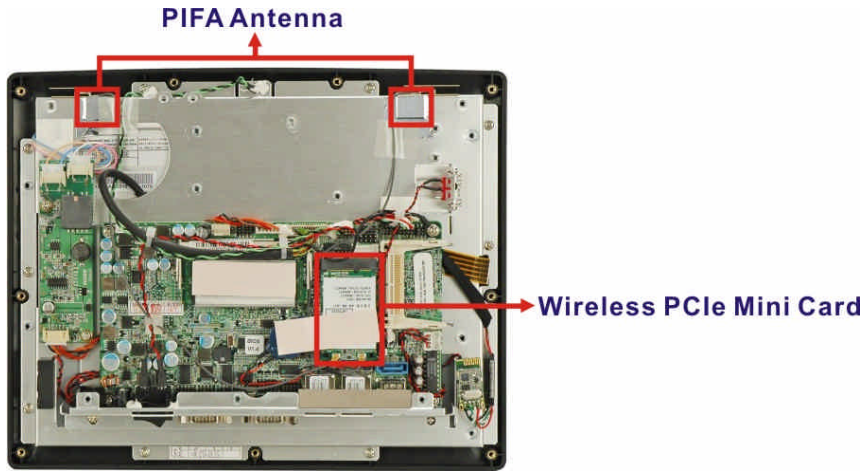


Figure 2-13: PIFA Antenna and Wireless Module

Chapter

3

Unpacking

3.1 Unpacking

To unpack the flat panel PC, follow the steps below:



WARNING!

The front side LCD screen has a protective plastic cover stuck to the screen. Only remove the plastic cover after the flat panel PC has been properly installed. This ensures the screen is protected during the installation process.

Use box cutters, a knife or a sharp pair of scissors that seals the top side of the external (second) box.

Open the external (second) box.

Use box cutters, a knife or a sharp pair of scissors that seals the top side of the internal (first) box.

Lift the monitor out of the boxes.








Remove both polystyrene ends, one from each side.

Pull the plastic cover off the flat panel PC.

Make sure all the components listed in the packing list are present.

0.1.1 Packing List

The SP-xx00-72 flat panel PC is shipped with the following components:

Quantity	Item	Image
Standard		
1	SP-xx00-72 series	
1	Power adapter	
1	Power cord	
1	SATA and power cable	
1	Screw kit	
1	User manual CD and driver CD	
1	Touch pen	

Optional	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	
.	

If any of these items are missing or damaged, contact the distributor or sales representative immediately.

Chapter

4

Installation

1.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the SP-xx00-72 may result in permanent damage to the SP-xx00-72 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the SP-xx00-72. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the SP-xx00-72 is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** - When configuring the SP-xx00-72, place it on an anti-static pad. This reduces the possibility of ESD damaging the SP-xx00-72.
- **Only handle the edges of the PCB:** - When handling the PCB, hold the PCB by the edges.

1.2 Installation Precautions

When installing the flat panel PC, please follow the precautions listed below:

- **Power turned off:** When installing the flat panel PC, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- **Certified Engineers:** Only certified engineers should install and modify onboard functionalities.

- **Anti-static Discharge:** If a user open the rear panel of the flat panel PC, to configure the jumpers or plug in added peripheral devices, ground themselves first and wear an anti-static wristband.

1.3 Preinstalled Components

The following components are all preinstalled.

- Motherboard
- TFT LCD screen
- 1.0 GB DDR2 memory module
- Resistive type touch screen
- Wireless LAN module
- Bluetooth module
- AT/ATX power switch
- Hard disk drive (HDD)

Preinstalled customizations may include the following.

- Different DDR2 memory module
- Hard disk drive (SP-1200-72 only)

Component installation is described in **the following sections.**

1.4 Installation and Configuration Steps

The following installation steps must be followed.

Unpack the flat panel PC

Install a CF card

Install a HDD (SP-1200-72 only)

Configure the system

Connect peripheral devices to the bottom panel of the flat panel PC

Mount the flat panel PC

0.1 Removing the Back Cover



WARNING:

Over-tightening back cover screws will crack the plastic frame.
Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

To access the SP-xx00-72 internally the back cover must be removed. To remove the back cover, please follow the steps below.

Remove the retention screws (**Figure 1-1**) and lift the cover off the flat panel PC.



Figure 1-1: Back Cover Retention Screws

Lift the cover off and pull down the cover a bit to make it possible to lift the cover further more after removing the retention screws (**Figure 1-2**). More strength is required to separate the cover from the chassis.

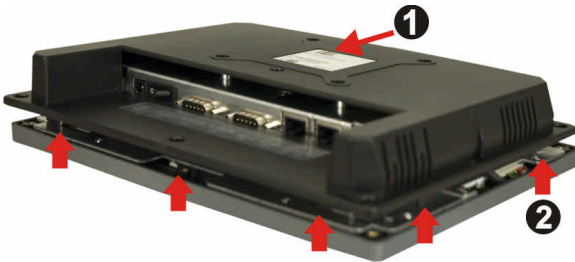


Figure 1-2: SP-xx00-72 Plastic Back Cover Removal

0.1 CF Card Installation

The SP-xx00-72 series has one CF Type II slot inside the rear panel. To install the CF card, follow the instructions below.

Locate the CF slot. Insert a CF card into the slot (**Figure 1-3**).

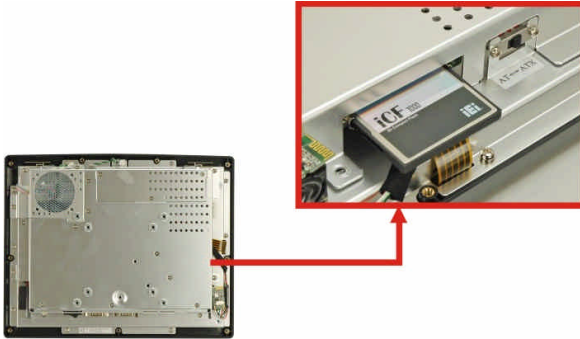


Figure 1-3: CF Card Location

Replace the plastic back cover. For SP-800-72, more strength is required when pushing the bottom part of the cover down to the chassis (**Figure 1-4**).

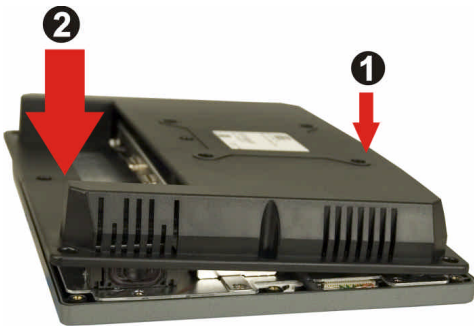


Figure 1-4: SP-800-72 Plastic Back Cover Replacement

Once replaced reinsert the nine previously removed retention screws.

0.1 HDD Installation (SP-1200-72 Only)

To install the HDD into the SP-1200-72, please follow the steps below:

Remove the plastic back cover. See **Section 0.1** above.

Remove the aluminum cover. See **Section 1.4.2**.

Remove the four HDD bracket retention screws and lift the HDD bracket off the panel PC.

Attach the HDD brackets to the HDD. To do this, align the four retention screw holes in the both sides of the HDD bracket with the retention screw holes on the sides of the HDD. Insert four retention screws into the HDD bracket (Figure 1-5).

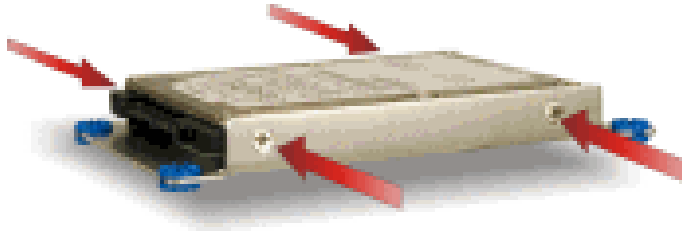


Figure 1-5: SP-1200-72 HDD Retention Screws

Connect the SATA cable to the rear of HDD and the SATA connector on the motherboard.

Install the HDD into the SP-1200-72 by aligning the retention screw holes in the HDD brackets with the retention screw holes on the chassis. Insert the four retention screws.

Replace the aluminum back cover to the chassis.

Replace the plastic back cover.



WARNING:

Over-tightening back cover screws will crack the plastic frame.
Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

0.1 AT/ATX Mode Selection

AT and ATX power modes can both be used on the SP-xx00-72 series. The selection is made through an AT/ATX switch on the aluminum chassis inside the plastic back cover (Figure 1-6). To select AT mode or ATX mode, follow the steps below.

Remove the plastic back cover. See **Section 0.1** above.

Locate the AT/ATX switch on the aluminum chassis (**Figure 1-6**).

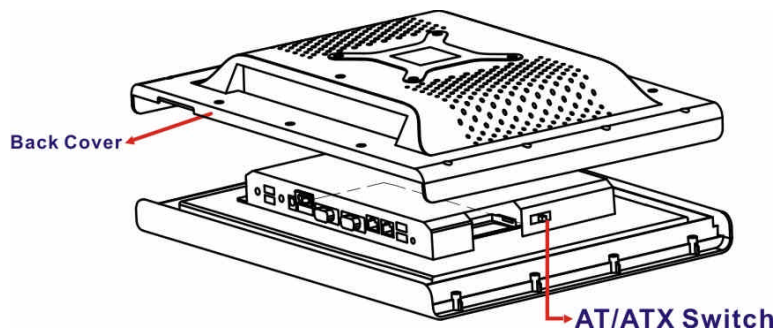


Figure 1-6: AT/ATX Switch Location

Adjust the AT/ATX switch.

0.1.1 AT Power Mode

With the AT mode selected, the power is controlled by a central power unit rather than a power switch. The SP-xx00-72 panel PC turns on automatically when the power is connected. The AT mode benefits a production line to control multiple panel PCs from a central management center and other applications including:

- ATM
- Self-service kiosk
- Plant environment monitoring system
- Factory automation platform
- Manufacturing shop flow

0.1.2 ATX Power Mode

With the ATX mode selected, the SP-xx00-72 panel PC goes in a standby mode when it is turned off. The panel PC can be easily turned on via network or a power switch in standby mode. Remote power control is perfect for advertising applications since the broadcasting time for each panel PC can be set individually and controlled remotely. Other possible application includes


- Security surveillance
- Point-of-Sale (POS)
- Advertising terminal

0.2 Jumper Settings



NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

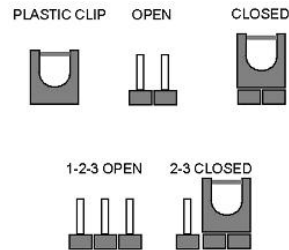

The following jumpers can be found on the motherboard installed in the SP-xx00-72. Before the SP-xx00-72 is installed, the jumpers must be set in accordance with the desired configuration. The jumpers on the SP-xx00-72 motherboard are listed in **Table 1-1**.

Description	Label	Type
Clear CMOS	J_COMS1	2-pin header
COM1 Pin 9 setting	JP8	10-pin header
COM3 Pin 9 setting	JP10	6-pin header
COM3 RX RS-232/422/485 select	JP9	8-pin header
COM3 TX RS-422/485 select	JP11	6-pin header
COM3 RS-232/422/485 select	JP6	12-pin header

Table 1-1: Jumpers

0.2.1 Access the Jumpers

To access the jumpers, remove the back cover. To remove the back cover, please refer to **Section 0.1 Step 1 ~ Step 4**.

0.2.2 Preconfigured Jumpers



WARNING:

Do not change the settings on the jumpers in described here. Doing so may disable or damage the system.

The following jumpers are preconfigured for the SP-xx00-72. Users should no change these jumpers (**Table 1-2**).

Jumper Name	Label	Type
LVDS voltage selection	J_VLVDS1	3-pin header
Touch Screen Select	J1	4-pin header
Panel Type and Resolution	J_LCD_TYPE1	10-pin header

Table 1-2: Preconfigured Jumpers

0.2.3 Clear CMOS Jumper

- Jumper Label:** J_CMOS1
- Jumper Type:** 2-pin header
- Jumper Settings:** See **Table 1-3**
- Jumper Location:** See **Figure 1-7**

If the SP-xx00-72 fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper cap to close the pins for a few seconds then remove the jumper clip.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in **Table 1-3**.

Clear CMOS	Description	
Short 1 - 2	Keep CMOS Setup	Default
Short 2 - 3	Clear CMOS Setup	

Table 1-3: Clear CMOS Jumper Settings

The location of the clear CMOS jumper is shown in **Figure 1-7** below.

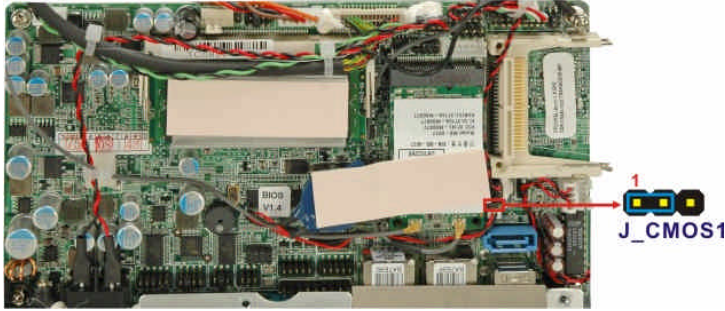


Figure 1-7: Clear CMOS Jumper

0.2.4 COM Port Pin 9 Select

Jumper Label: JP8 and JP10

Jumper Settings: See Table 1-4

Jumper Location: See Figure 1-8

Two jumpers (JP8 and JP10) configure pin 9 on COM1 and COM3 DB-9 connectors. Pin 9 on the COM1 and the COM3 DB-9 connectors can be set as the ring (RI) signal, +5 V or +12 V. The COM1 and COM3 Pin 9 Setting jumper selection options are shown in **Table 1-4**.

JP8	Description	
Short 1-3	COM1 RI Pin use +12 V	
Short 5-7	COM1 RI Pin use +5 V	
Short 7-9	COM1 RI Pin use RI	Default

Table 1-4: COM1 Pin 9 Setting Jumper Settings

JP10	Description	
Short 1-2	COM3 RI Pin use +12 V	
Short 3-4	COM3 RI Pin use RI	Default
Short 5-6	COM3 RI Pin use +5 V	

Table 1-5: COM3 Pin 9 Setting Jumper Settings

The COM1 and COM3 Pin 9 Setting jumper locations are shown in **Figure 1-8** below.

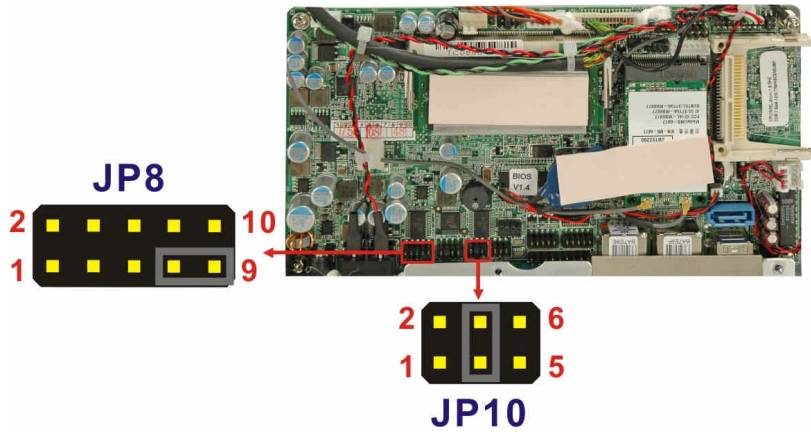


Figure 1-8: COM1 and COM3 Pin 9 Setting Jumper Locations

0.2.4.1 COM3 RS-422 and RS-485 Pinouts

The pinouts for RS-422 and RS-485 operation of external serial port COM 3 are detailed below.

COM 3	RS-422 Description
Pin 1	TX-
Pin 2	TX+
Pin 6	RX-
Pin 7	RX+

Table 1-6: RS-422 Pinouts

COM 3	RS-485 Description
Pin 1	Data-
Pin 2	Data+

Table 1-7: RS-485 Pinouts

0.2.5 COM3 RX Function Select Jumper

Jumper Label:	JP9
Jumper Type:	8-pin header
Jumper Settings:	See Table 1-8
Jumper Location:	See Figure 1-9

The COM3 RX Function Select jumper sets the communication protocol used by the RX serial communications port COM3 as RS-232, RS-422 or RS-485. The COM3 RX Function Select jumper settings are shown in **Table 1-8**.

COM3 RX Function Select	Description	
Short 3-4	RS-232	Default
Short 1-2, 5-6	RS-422	
Short 1-2, 7-8	RS-485	

Table 1-8: COM3 RX Function Select Jumper Settings

The COM3 RX Function Select jumper location is shown in **Figure 1-9**.

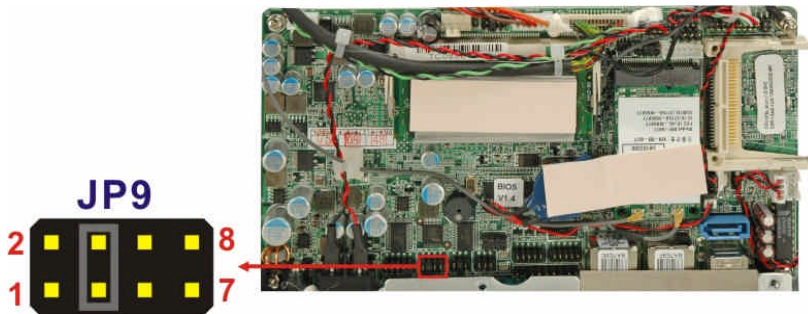


Figure 1-9: COM3 RX Function Select Jumper Location

0.2.6 COM3 TX Function Select Jumper

Jumper Label:	JP11
Jumper Type:	6-pin header
Jumper Settings:	See Table 1-9
Jumper Location:	See Figure 1-10

The COM3 TX Function Select jumper configures the TX pin on COM3 serial port connector as RS-422 as an RS-485. The COM3 TX Function Select jumper selection options are shown in **Table 1-9**.

COM3 TX Function Select	Description	
Short 1 – 3	RS-422	Default
Short 2 – 4	RS-422	Default
Short 3 – 5	RS-485	
Short 4 – 6	RS-485	

Table 1-9: COM3 TX Function Select Jumper Settings

The COM3 TX Function Select jumper location is shown in **Figure 1-10** below.

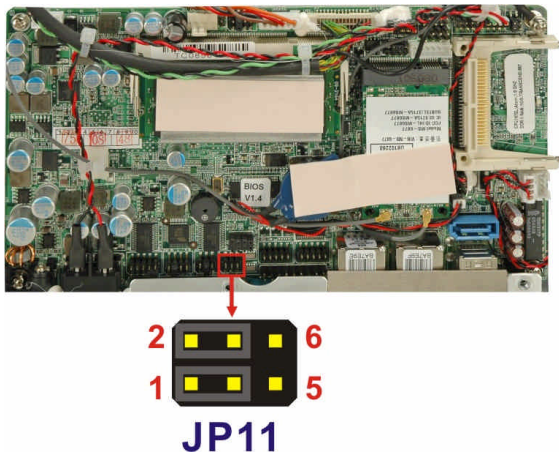


Figure 1-10: COM3 TX Function Select Jumper Pinout Locations

0.2.7 COM3 RS-232/422/485 Serial Port Select Jumper

- Jumper Label:** JP6
- Jumper Type:** 12-pin header (four 3-pin headers combined)
- Jumper Settings:** See **Table 1-10**
- Jumper Location:** See **Figure 1-11**

The COM3 RS-232/422/485 Serial Port Select jumper sets the communication protocol used by the second serial communications port (COM3) as RS-232, RS-422 or RS-485. The COM3 RS-232/422/485 Serial Port Select settings are shown in **Table 1-10**.

RS-232/485 Select	Description	
Short 1-2	RS-232	Default
Short 4-5	RS-232	Default
Short 7-8	RS-232	Default
Short 10-11	RS-232	Default
Short 2-3	RS-422/485	
Short 5-6	RS-422/485	
Short 8-9	RS-422/485	
Short 11-12	RS-422/485	

Table 1-10: COM3 RS-232/422/485 Serial Port Select Jumper Settings

The COM3 RS-232/422/485 Serial Port Select jumper location is shown in **Figure 1-11**.

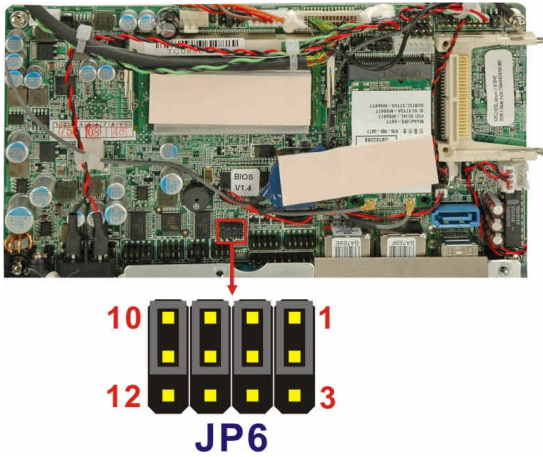


Figure 1-11: COM3 RS-232/422/485 Serial Port Select Jumper Location

0.3 Mounting the System



WARNING!

When mounting the flat panel PC onto an arm, onto the wall or onto a panel, it is better to have more than one person to help with the installation to make sure the panel PC does not fall down and get damaged.

The four methods of mounting the SP-xx00-72 are listed below.

- Wall mounting
- Panel mounting
- Arm mounting
- Rack mounting

The four mounting methods are described below.

0.3.1 Wall Mounting

To mount the flat panel PC onto the wall, please follow the steps below.

Select the location on the wall for the wall-mounting bracket.

Carefully mark the locations of the four screw holes in the bracket on the wall.

Drill four pilot holes at the marked locations on the wall for the bracket retention screws.

Align the wall-mounting bracket screw holes with the pilot holes.

Secure the mounting-bracket to the wall by inserting the retention screws into the four pilot holes and tightening them (**Figure 1-12**).

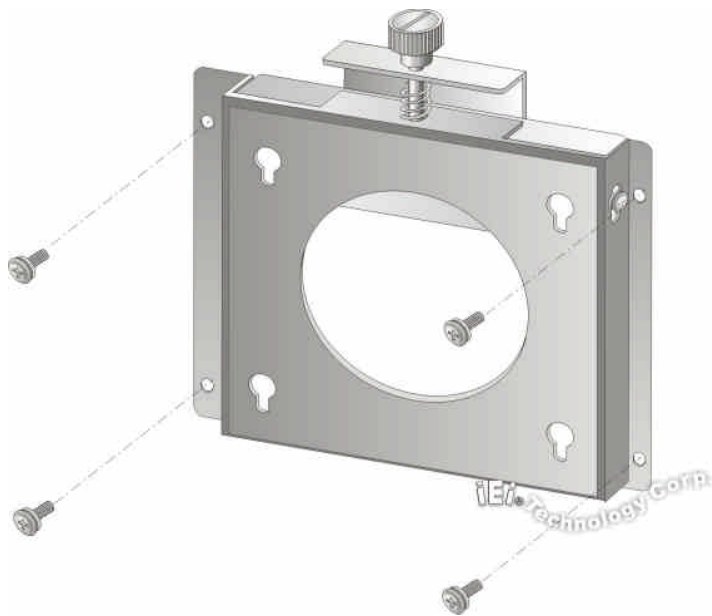



Figure 1-12: Wall-mounting Bracket

Insert the four monitor mounting screws provided in the wall mount kit into the four screw holes on the rear panel of the flat panel PC and tighten until the screw shank is secured against the rear panel (**Figure 1-13**).



WARNING:

Please use the M4 screws provided in the wall mount kit for the rear panel. If the screw is missing, the thread depth of the replacement screw should be not more than 4 mm.

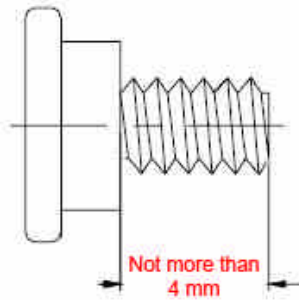

Align the mounting screws on the monitor rear panel with the mounting holes on the bracket.

Carefully insert the screws through the holes and gently pull the monitor downwards until the monitor rests securely in the slotted holes (**Figure 1-13**). Ensure that all four of the mounting screws fit snugly into their respective slotted holes.



NOTE:

In the diagram below the bracket is already installed on the wall.

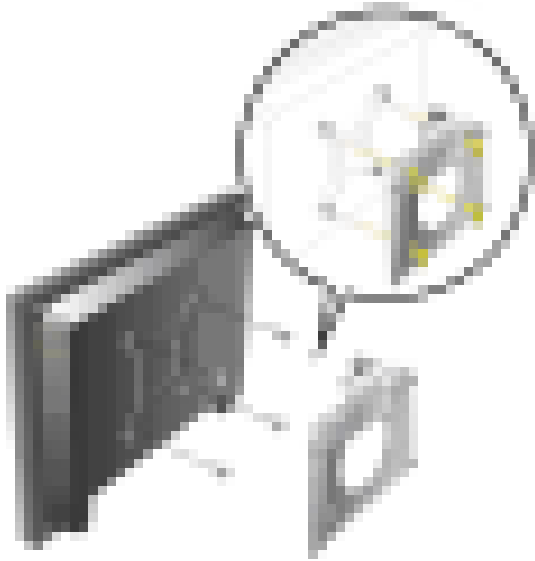


Figure 1-13: Chassis Support Screws

Secure the panel PC by fastening the retention screw of the wall-mounting bracket.

(Figure 1-14).

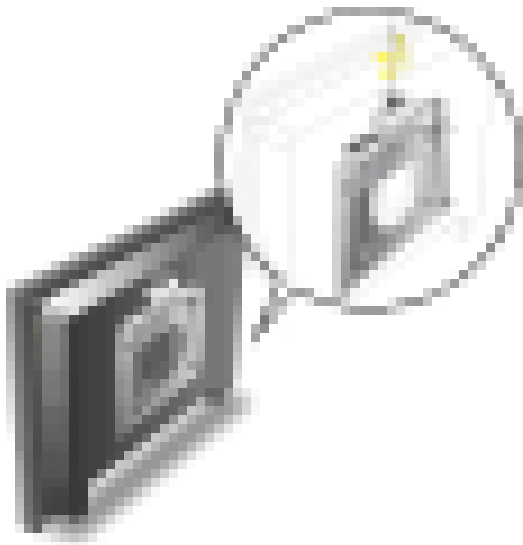


Figure 1-14: Secure the Panel PC

0.1.1 Panel Mounting

To mount the SP-xx00-72 series flat panel PC into a panel, please follow the steps below.

Select the position on the panel to mount the flat panel PC.

Cut out a section from the panel that corresponds to the rear panel dimensions of the flat panel PC. Take care that the panel section that is cut out is smaller than the overall size of the frame that surrounds the flat panel PC but just large enough for the rear panel of the flat panel PC to fit through (see **Figure 1-15**, **Figure 1-16**, **Figure 1-17** and **Figure 1-18**).

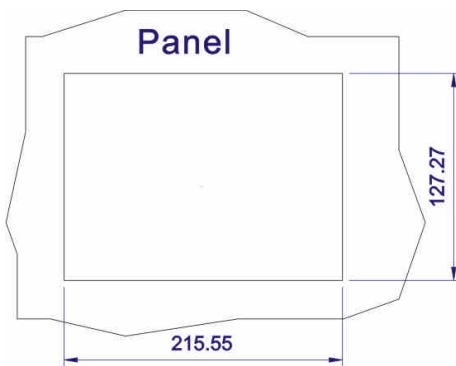


Figure 1-15: SP-700-72 Panel Opening

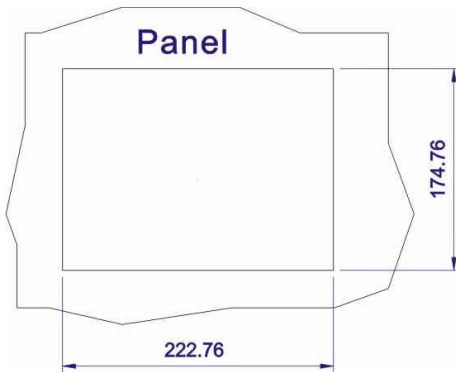


Figure 1-16: SP-800-72 Panel Opening

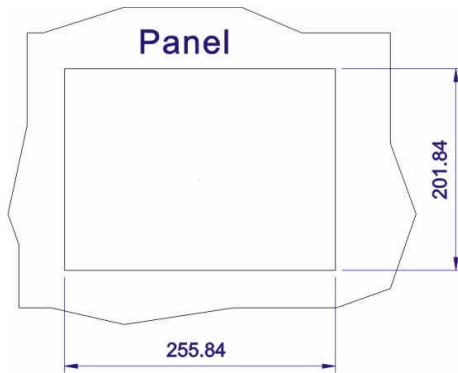


Figure 1-17: SP-1000-72 Panel Opening

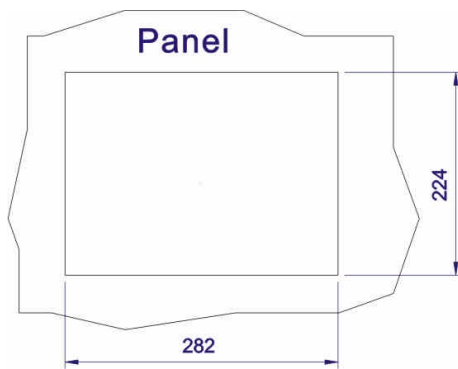


Figure 1-18: SP-1200-72 Panel Opening

Slide the flat panel PC through the hole until the frame is flush against the panel.

Insert the panel mounting clamps into the pre-formed holes along the edges of the chassis, behind the frame.

Tighten the screws that pass through the panel mounting clamps until the plastic caps at the front of all the screws are firmly secured to the panel (**Figure 1-19**).

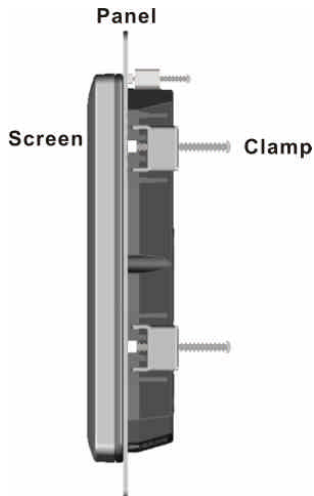


Figure 1-19: Tighten the Panel Mounting Clamp Screws

0.1.1 Arm Mounting

The SP-xx00-72 series is VESA (Video Electronics Standards Association) compliant and can be mounted on an arm with a 75mm or 100mm interface pad. To mount the SP-xx00-72 series on an arm, please follow the steps below.

The arm is a separately purchased item. Please correctly mount the arm onto the surface it uses as a base. To do this, refer to the installation documentation that came with the mounting arm.



NOTE:

When purchasing the arm please ensure that it is VESA compliant and that the arm has a 75 mm interface pad. If the mounting arm is not VESA compliant it cannot be used to support the SP-xx00-72 series flat panel PC. The SP-1000-72 and SP-1200-72 also support VESA MIS-D 100.

Once the mounting arm has been firmly attached to the surface, lift the flat panel PC onto the interface pad of the mounting arm.

Align the retention screw holes on the mounting arm interface with those in the flat panel PC. The SP-700-72/ SP-800-72 arm mount retention screw holes are shown in **Figure 1-20** and the SP-1000-72 /SP-1200-72 are shown in **Figure 1-21**.

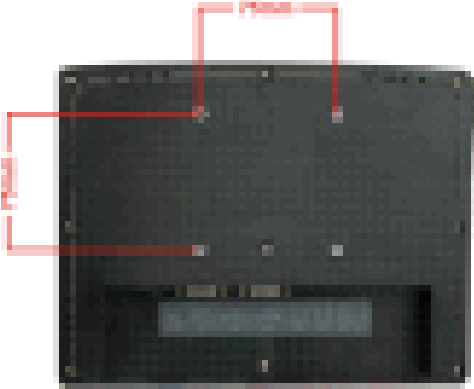


Figure 1-20: SP-700-72/SP-800-72 Arm Mounting Retention Screw Holes

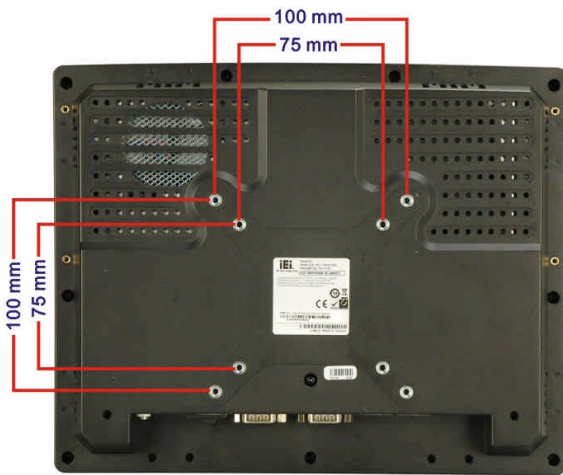


Figure 1-21: SP-1000-72/SP-1200-72 Arm Mounting Retention Screw Holes

Secure the flat panel PC to the interface pad by inserting four retention screws through the bottom of the mounting arm interface pad and into the flat panel PC.

0.1.1 Cabinet and Rack Installation

The SP-xx00-72 series flat panel PC can be installed into a cabinet or rack. The installation procedures are similar to the panel mounting installation. To do this, please follow the steps below:



NOTE:

When purchasing the cabinet/rack installation bracket, make sure it is compatible with both the SP-xx00-72 series flat panel PC and the rack/cabinet into which the SP-xx00-72 series is installed.

Slide the rear chassis of the SP-xx00-72 series flat panel PC through the rack/cabinet bracket until the aluminum frame is flush against the front of the bracket (**Figure 1-22**).

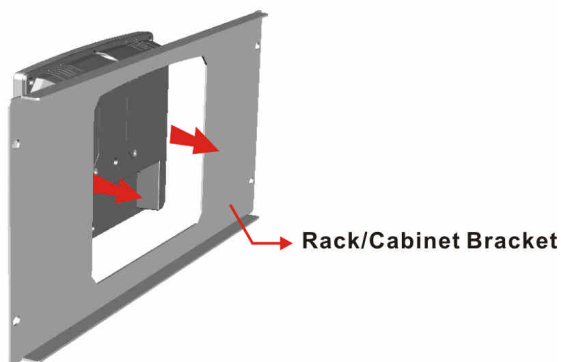


Figure 1-22: The Rack/Cabinet Bracket

Insert the rack mounting clamps into the pre-formed holes along the edges of the flat panel PC, behind the ABS/PC plastic frame. There are a total of 4 rack mounting clamps for SP-700-72/ SP-800-72 and 6 rack mounting clamps for SP-1000-72/SP-1200-72.

Tighten the screws that pass through the rack mounting clamps until the plastic caps at the front of all the screws are firmly secured to the bracket (**Figure 1-23**).

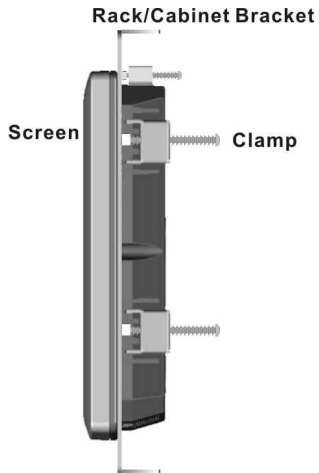


Figure 1-23: Secure the Rack/Cabinet Bracket (SP-1000-72/SP-1200-72)

Slide the flat panel PC with the attached rack/cabinet bracket into a rack or cabinet
(Figure 1-24).

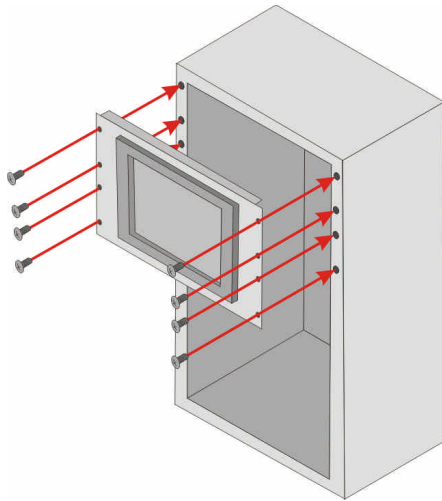


Figure 1-24: Install into a Rack/Cabinet

Once the flat panel PC with the attached rack/cabinet bracket has been properly inserted into the rack or cabinet, secure the front of the rack/cabinet bracket to the front of the rack or cabinet (**Figure 1-24**).

0.1 Bottom Panel Connectors

0.1.1 LAN Connection

There are two external RJ-45 LAN connectors. The RJ-45 connector enables connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Locate the RJ-45 connectors on the bottom panel of the SP-xx00-72 Series.

Align the connectors. Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the bottom panel of the SP-xx00-72 Series. See **Figure 1-25**.



Figure 1-25: LAN Connection

Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 connector.

0.1.1 Serial Device Connection

The SP-xx00-72 Series has two male DB-9 connectors on the bottom panel for serial devices to be connected. Follow the steps below to connect a serial device to the SP-xx00-72 Series panel PC.

Locate the DB-9 connector. The location of the DB-9 connector is shown in **Chapter 2**.

Insert the serial connector. Insert the DB-9 connector of a serial device into the DB-9 connector on the bottom panel. See **Figure 1-26**.

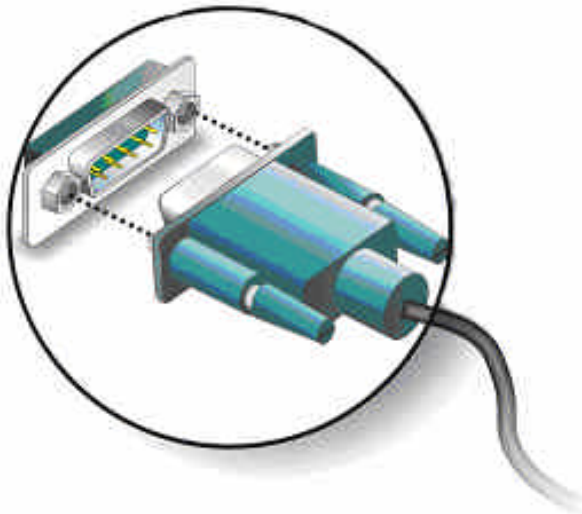


Figure 1-26: Serial Device Connector

Secure the connector. Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

0.1.1 USB Device Connection

There are two external USB 2.0 connectors. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Located the USB connectors. The locations of the USB connectors are shown in **Chapter 2.**

Align the connectors. Align the USB device connector with one of the connectors on the bottom panel. See **Figure 1-27.**

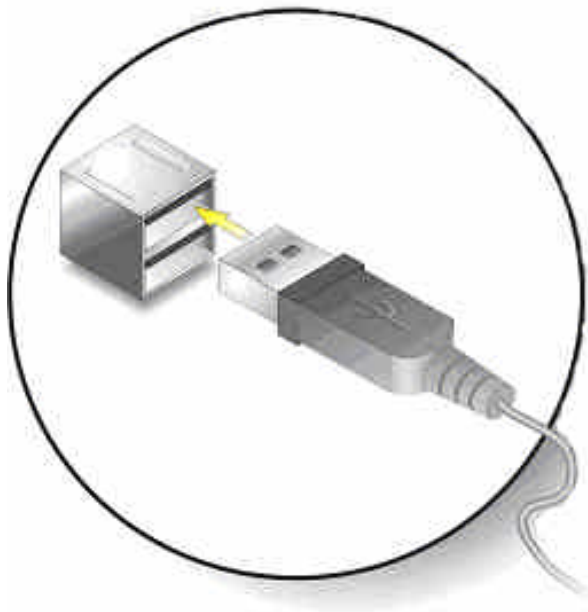


Figure 1-27: USB Device Connection

Insert the device connector. Once aligned, gently insert the USB device connector into the onboard connector.

Chapter

5

System Maintenance

1.1 System Maintenance Introduction

If the components of the SP-xx00-72 series fail they must be replaced. Components that can be replaced include:

- CF Module
- Bluetooth module
- Wireless LAN module
- SO-DIMM module

Please contact the system reseller or vendor to purchase the replacement parts. Back cover removal instructions for the SP-xx00-72 series are described below.

1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the SP-xx00-72 may result in permanent damage to the SP-xx00-72 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the SP-xx00-72. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the SP-xx00-72 is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** - When configuring the SP-xx00-72, place it on an anti-static pad. This reduces the possibility of ESD damaging the SP-xx00-72.

- **Only handle the edges of the PCB:** - When handling the PCB, hold the PCB by the edges.

1.3 Turn off the Power



WARNING:

Failing to turn off the system before opening it can cause permanent damage to the system and serious or fatal injury to the user.

Before any maintenance procedures are carried out on the system, make sure the system is turned off.

1.4 Opening the System

1.4.1 Removing the Back Cover



WARNING:

Over-tightening back cover screws will crack the plastic frame.
Maximum torque for cover screws is 5 kg-cm (0.36 lb-ft/0.49 Nm).

To access the SP-xx00-72 internally the back cover must be removed. To remove the back cover, please follow the steps below.

Follow all anti-static procedures. See **Section 1.2**.

Turn off the power. See **Section 1.3**.

Remove the retention screws on the back. Remove the retention screws (**Figure 1-1**) from the back cover.



Figure 1-1: Back Cover Retention Screws

Lift the cover off and pull down the cover a bit to make it possible to lift the cover further more after removing the retention screws (**Figure 1-2**). More strength is required to separate the cover from the chassis.



Figure 1-2: SP-xx00-72 Plastic Back Cover Removal

0.1.1 SP-xx00-72 Series Internal Aluminum Cover Removal

To remove the internal aluminum cover, follow the steps below.

Remove the retention screws securing the internal aluminum cover. The screw numbers are varied in different models. **Figure 1-3** shows the aluminum cover retention screws of the SP-1000-72.

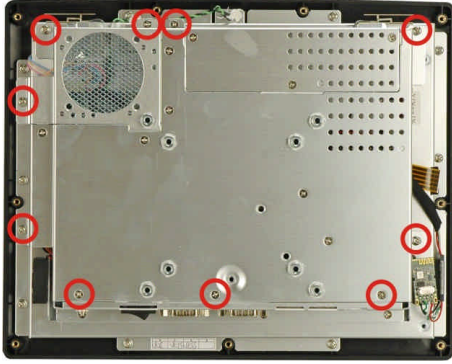


Figure 1-3: SP-1000-72 Aluminum Back Cover Retention Screws

Lift the aluminum cover off the SP-xx00-72 series.

0.1 Replacing Components

0.1.1 Memory Module Replacement

The flat panel PC is preinstalled with a 1 GB DDR2 memory module. If the memory module is fail, follow the instructions below to replace the memory module.

Remove the back cover. See **Section 1.4.1** above.

Remove the internal aluminum back cover. See **Section 1.4.2** above.

Locate the DDR2 SO-DIMM on the motherboard (**Figure 1-4**).

Preinstalled 1.0 GB 533 MHz DDR2 SO-DIMM

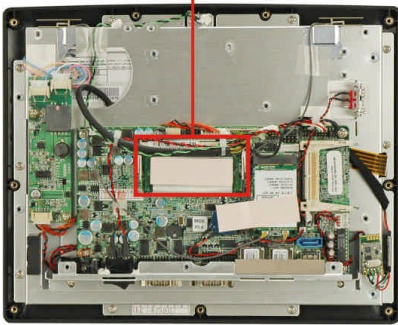


Figure 1-4: SP-1000-72 SO-DIMM Socket Location

Remove the DDR memory module by pulling both the spring retainer clips outward from the socket.

Grasp the DDR memory module by the edges and carefully pull it out of the socket.

Install the new DDR memory module by pushing it into the socket at an angle (**Figure 1-5**).

Gently pull the spring retainer clips of the SO-DIMM socket out and push the rear of the DDR memory module down (**Figure 1-5**).

Release the spring retainer clips on the SO-DIMM socket. They clip into place and secure the DDR memory module in the socket.

Formatted: Bullets and Numbering

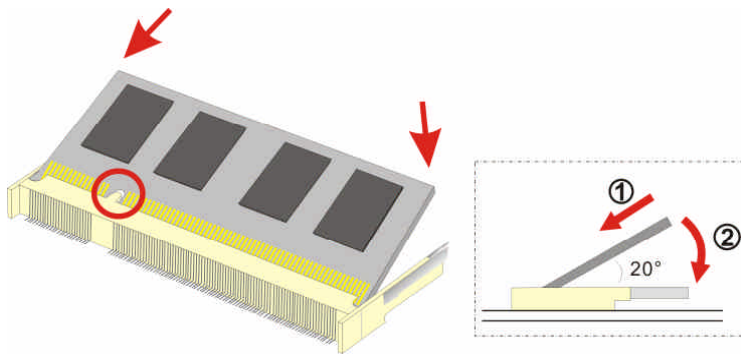


Figure 1-5: DDR SO-DIMM Module Installation

0.1.1 CF Card Replacement

The SP-xx00-72 series has one CF Type II slot. To replace the CF card, follow the instructions below.

Follow all anti-static procedures. See **Section 1.2**.

Turn off the power. See **Section 1.3**.

Remove the back cover. See **Section 1.4.1**.

Follow the instruction listed in Section 0.2 to replace the CF card.

0.1 Reinstalling the Covers



WARNING:

Failing to reinstall the covers may result in permanent damage to the system. Please make sure all coverings are properly installed.

When maintenance procedures are complete, please make sure all the covers are replaced, including the following:

- Aluminum cover
- Plastic cover

Chapter

6

AMI BIOS Setup

1.1 Introduction

A licensed copy of AMI BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

1.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

1.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes

F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 1-1: BIOS Navigation Keys

1.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

1.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in **Chapter 5**.

1.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:


- **Main** Changes the basic system configuration.
- **Advanced** Changes the advanced system settings.
- **PCIPnP** Changes the advanced PCI/PnP Settings
- **Boot** Changes the system boot configuration.
- **Security** Sets User and Supervisor Passwords.
- **Chipset** Changes the chipset settings.
- **Exit** Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

1.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

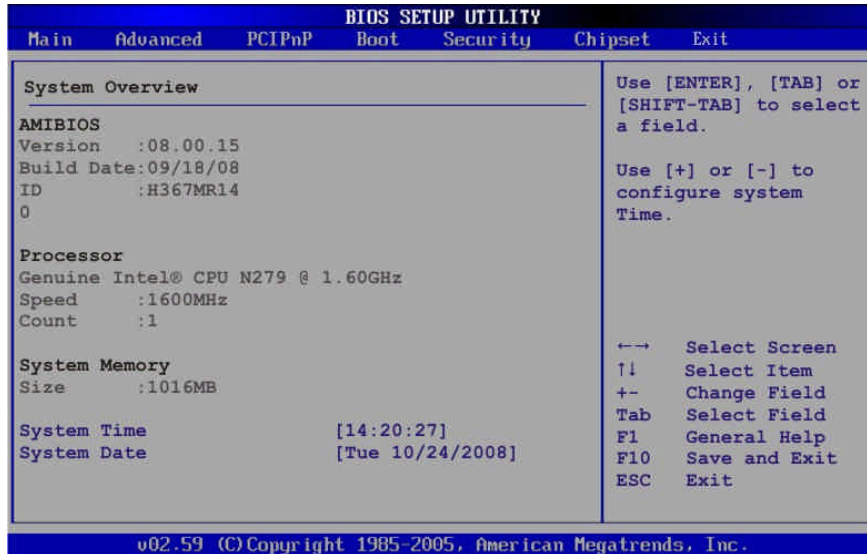

BIOS Menu 1: Main

→ System Overview

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- **AMI BIOS:** Displays auto-detected BIOS information
 - Version: Current BIOS version
 - Build Date: Date the current BIOS version was made
 - ID: Installed BIOS ID
- **Processor:** Displays auto-detected CPU specifications
 - Type: Names the currently installed processor
 - Speed: Lists the processor speed
 - Count: The number of CPUs on the CPU card
- **System Memory:** Displays the auto-detected system memory.
 - Size: Lists memory size

The System Overview field also has two user configurable fields:

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

1.3 Advanced


Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING:

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.


- CPU Configuration (see **Section .1.3.1**)
- IDE Configuration (see **Section .1.3.2**)
- SuperIO Configuration (see **Section .1.3.3**)
- Hardware Health Configuration (see **Section .□**)
- Power Configuration (see **Section .1.3.5**)
- Remote Access Configuration (see **Section .1.3.6**)
- USB Configuration (see **Section .1.3.8**)

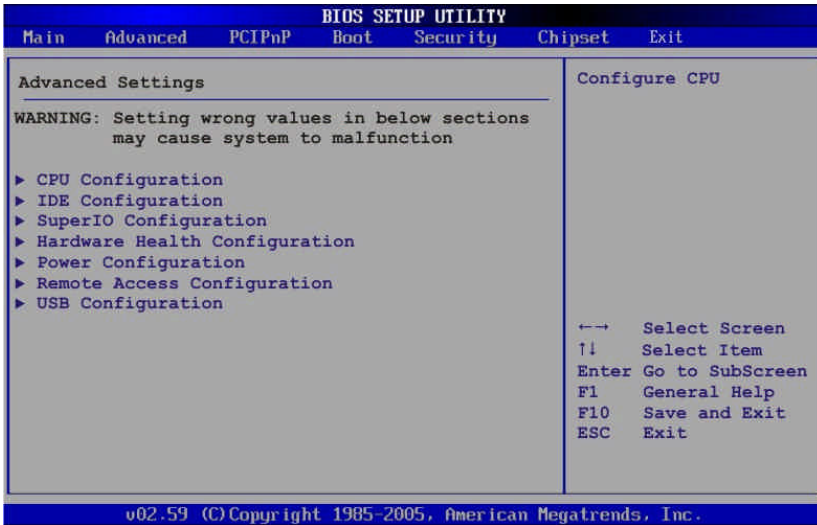

BIOS Menu 2: Advanced

1.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 3**) to view detailed CPU specifications and configure the CPU.

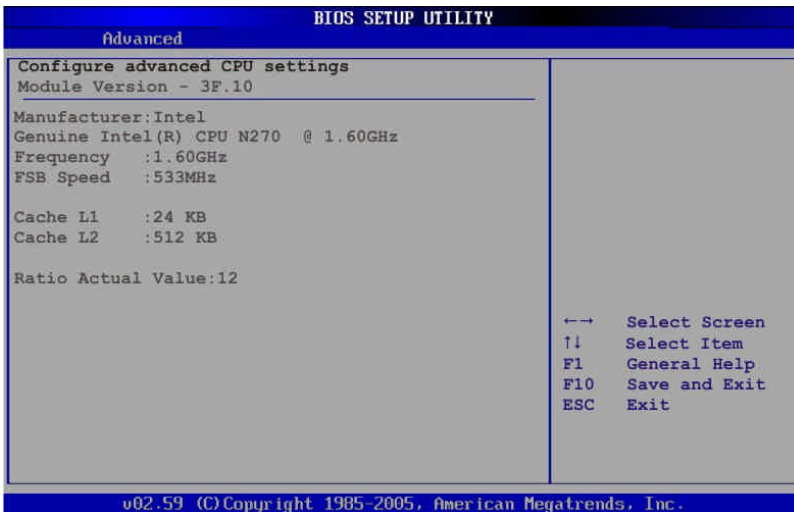


BIOS Menu 3: CPU Configuration

The CPU Configuration menu (**BIOS Menu 3**) lists the following CPU details:

- **Manufacturer:** Lists the name of the CPU manufacturer
- **Brand String:** Lists the brand name of the CPU being used
- **Frequency:** Lists the CPU processing speed
- **FSB Speed:** Lists the FSB speed
- **Cache L1:** Lists the CPU L1 cache size
- **Cache L2:** Lists the CPU L2 cache size

1.3.2 IDE Configuration

Use the **IDE Configuration** menu (**BIOS Menu 4**) to change and/or set the configuration of the IDE devices installed in the system.

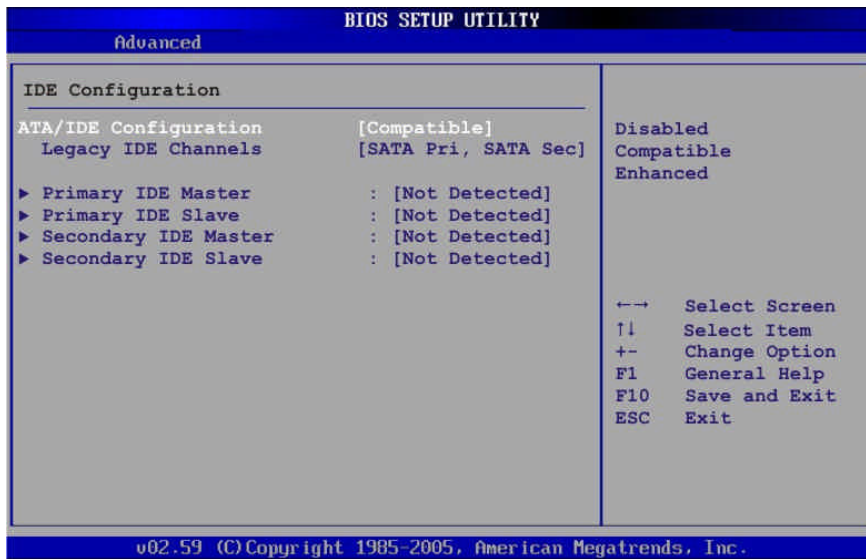

BIOS Menu 4: IDE Configuration

→ ATA/IDE Configurations [Compatible]

Use the **ATA/IDE Configurations** option to configure the ATA/IDE controller.

- **Disabled** Disables the on-board ATA/IDE controller.
- **Compatible** **DEFAULT** Configures the on-board ATA/IDE controller to be in

compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.

→ **Enhanced**

Configures the on-board ATA/IDE controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.

→ **Legacy IDE Channels [PATA Pri, SATA Sec]**

→ **SATA Only**

Only the SATA drives are enabled.

→ **SATA Pri, PATA Sec** **DEFAULT**

The IDE drives are enabled on the Primary IDE channel. The SATA drives are enabled on the Secondary IDE channel.

→ **PATA Only**

The IDE drives are enabled on the primary and secondary IDE channels. SATA drives are disabled.

→ **IDE Master and IDE Slave**

When entering setup, BIOS auto detects the presence of IDE devices. BIOS displays the status of the auto detected IDE devices. The following IDE devices are detected and are shown in the **IDE Configuration** menu:

- Primary IDE Master
- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The **IDE Configuration** menu (**BIOS Menu 4**) allows changes to the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 1.3.2.1** appear.

1.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.



BIOS Menu 5: IDE Master and IDE Slave Configuration

→ Auto-Detected Drive Parameters

The “grayed-out” items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device:** Lists the device type (e.g. hard disk, CD-ROM etc.)
- **Type:** Indicates the type of devices a user can manually select
- **Vendor:** Lists the device manufacturer
- **Size:** List the storage capacity of the device.

- **LBA Mode:** Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.
- **Block Mode:** Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.
- **PIO Mode:** Indicates the PIO mode of the installed device.
- **Async DMA:** Indicates the highest Asynchronous DMA Mode that is supported.
- **Ultra DMA:** Indicates the highest Synchronous DMA Mode that is supported.
- **S.M.A.R.T.:** Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
- **32Bit Data Transfer:** Enables 32-bit data transfer.

→ **Type [Auto]**

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

- **Not Installed** BIOS is prevented from searching for an IDE disk drive on the specified channel.
- **Auto** **DEFAULT** The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel.
- **CD/DVD** The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel.
- **ARMD** This option specifies an ATAPI Removable Media Device. These include, but are not limited to:
 - **ZIP**
 - **LS-120**

→ **LBA/Large Mode [Auto]**

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

- **Disabled** BIOS is prevented from using the LBA mode control on the specified channel.
- **Auto** **DEFAULT** BIOS auto detects the LBA mode control on the specified channel.

→ **Block (Multi Sector Transfer) [Auto]**

Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

- **Disabled** BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.
- **Auto** **DEFAULT** BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

→ **PIO Mode [Auto]**

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

- **Auto** **DEFAULT** BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.
- **0** PIO mode 0 selected with a maximum transfer rate of 3.3MBps
- **1** PIO mode 1 selected with a maximum transfer rate of 5.2MBps
- **2** PIO mode 2 selected with a maximum transfer rate of 8.3MBps

- 3 PIO mode 3 selected with a maximum transfer rate of 11.1MBps
- 4 PIO mode 4 selected with a maximum transfer rate of 16.6MBps
(This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

→ **DMA Mode [Auto]**

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.
- **SWDMA0** Single Word DMA mode 0 selected with a maximum data transfer rate of 2.1MBps
- **SWDMA1** Single Word DMA mode 1 selected with a maximum data transfer rate of 4.2MBps
- **SWDMA2** Single Word DMA mode 2 selected with a maximum data transfer rate of 8.3MBps
- **MWDMA0** Multi Word DMA mode 0 selected with a maximum data transfer rate of 4.2MBps
- **MWDMA1** Multi Word DMA mode 1 selected with a maximum data transfer rate of 13.3MBps
- **MWDMA2** Multi Word DMA mode 2 selected with a maximum data transfer rate of 16.6MBps
- **UDMA1** Ultra DMA mode 0 selected with a maximum data transfer rate of 16.6MBps
- **UDMA1** Ultra DMA mode 1 selected with a maximum data transfer rate of 25MBps
- **UDMA2** Ultra DMA mode 2 selected with a maximum data transfer rate of 33.3MBps
- **UDMA3** Ultra DMA mode 3 selected with a maximum data transfer

rate of 44MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **UDMA4** Ultra DMA mode 4 selected with a maximum data transfer rate of 66.6MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **UDMA5** Ultra DMA mode 5 selected with a maximum data transfer rate of 99.9MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **S.M.A.R.T [Auto]**

Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

→ **Auto** **DEFAULT** BIOS auto detects HDD SMART support.

→ **Disabled** Prevents BIOS from using the HDD SMART feature.

→ **Enabled** Allows BIOS to use the HDD SMART feature

→ **32Bit Data Transfer [Enabled]**


Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.

→ **Disabled** Prevents the BIOS from using 32-bit data transfers.

→ **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

1.3.3 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 6**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

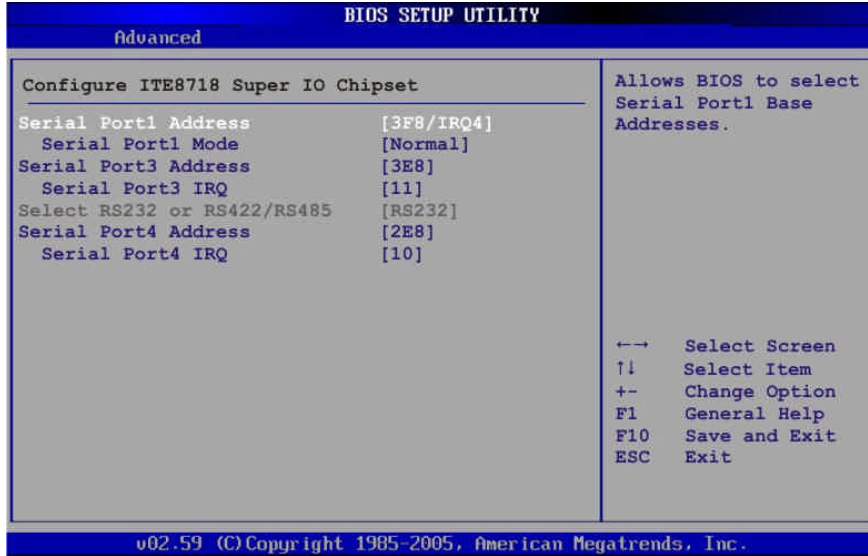

BIOS Menu 6: Super IO Configuration

→ Serial Port1 Address [3F8/IRQ4]

Use the **Serial Port1 Address** option to select the Serial Port 1 base address.

- **Disabled** No base address is assigned to Serial Port 1
- **3F8/IRQ4** **DEFAULT** Serial Port 1 I/O port address is 3F8 and the interrupt address is IRQ4
- **2F8/IRQ3** Serial Port 1 I/O port address is 2F8 and the interrupt address is IRQ3
- **3E8/IRQ4** Serial Port 1 I/O port address is 3E8 and the interrupt address is IRQ4
- **2E8/IRQ3** Serial Port 1 I/O port address is 2E8 and the interrupt address is IRQ3

→ Serial Port1 Mode [Normal]

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

- ➔ **Normal** **DEFAULT** Serial Port 1 mode is normal
- ➔ **IrDA** Serial Port 1 mode is IrDA
- ➔ **ASK IR** Serial Port 1 mode is ASK IR

➔ **Serial Port3 Address [3E8]**

Use the **Serial Port3 Address** option to select the Serial Port 3 base address.

- ➔ **Disabled** No base address is assigned to Serial Port 3
- ➔ **3E8** **DEFAULT** Serial Port 3 I/O port address is 3E8
- ➔ **2E8** Serial Port 3 I/O port address is 2E8
- ➔ **2F0** Serial Port 3 I/O port address is 2F0
- ➔ **2E0** Serial Port 3 I/O port address is 2E0

➔ **Serial Port3 IRQ [11]**

Use the **Serial Port3 IRQ** option to select the interrupt address for serial port 3.

- ➔ **10** Serial port 3 IRQ address is 10
- ➔ **11** **DEFAULT** Serial port 3 IRQ address is 11

➔ **Serial Port4 Address [2E8]**

Use the **Serial Port4 IRQ** option to select the interrupt address for serial port 4.

- ➔ **Disabled** No base address is assigned to serial port 3
- ➔ **2E8** **DEFAULT** Serial port 4 I/O port address is 2E8


➔ **Serial Port4 IRQ [10]**

Use the **Serial Port4 IRQ** option to select the interrupt address for serial port 4.

- ➔ **10** **DEFAULT** Serial port 4 IRQ address is 10

1.3.4 Hardware Health Configuration

The **Hardware Health Configuration** menu (**BIOS Menu 7**) shows the operating temperature, fan speeds and system voltages.

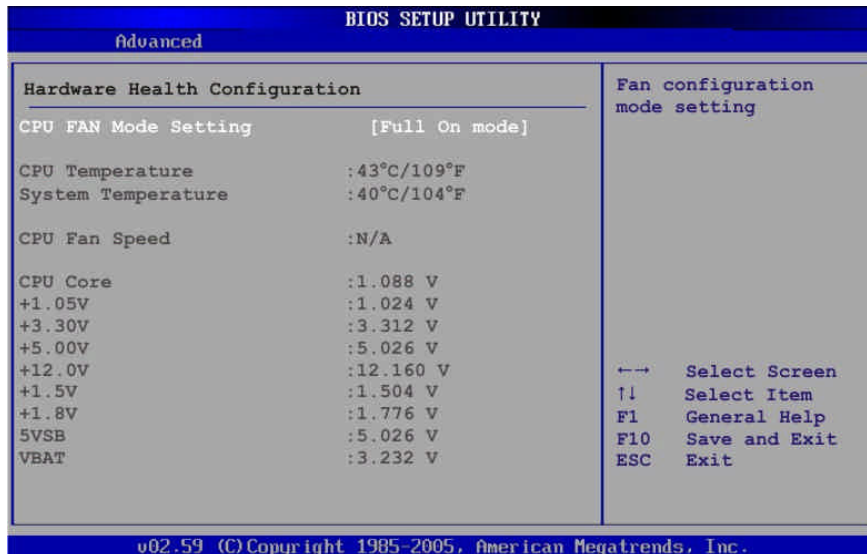

BIOS Menu 7: Hardware Health Configuration

→ CPU FAN Mode Setting [Full On Mode]

Use the **CPU FAN Mode Setting** option to configure the second fan.

- **Full On Mode** **DEFAULT** Fan is on all the time
- **Automatic mode** Fan is off when the temperature is low enough. Parameters must be set by the user.
- **PWM Manual mode** Pulse width modulation set manually

When the **CPU FAN Mode Setting** option is in the **Automatic Mode**, the following parameters can be set.

- CPU Temp. Limit of OFF

- CPU Temp. Limit of Start
- CPU Fan Start PWM
- Slope PWM

When the **CPU FAN Mode Setting** option is in the **PWM Manual Mode**, the following parameters can be set.

- CPU Fan PWM control

→ **CPU Temp. Limit of OFF [000]**



WARNING:

Setting this value too high may cause the fan to stop when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of OFF** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of OFF** option to select the CPU temperature at which the cooling fan should automatically turn off. To select a value, select the **CPU Temp. Limit of OFF** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

→ **CPU Temp. Limit of Start [020]**



WARNING:

Setting this value too high may cause the fan to start only when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of Start** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of Start** option to select the CPU temperature at which the cooling fan should automatically turn on. When the fan starts, it rotates using the starting pulse width modulation (PWM) specified in the **Fan 3 Start PWM** option below. To select a value, select the **CPU Temp. Limit of Start** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

→ **CPU Fan Start PWM [070]**

The **Fan 3 Start PWM** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Fan 3 Start PWM** option to select the PWM mode the fan starts to rotate with after the temperature specified in the **Temperature 3 Limit of Start** is exceeded. The Super I/O chipset supports 128 PWM modes. To select a value, select the **Fan 3 Start PWM** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

→ **Slope PWM [0.5 PWM]**

The **Slope PWM 1** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Slope PWM 1** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. A list of available options is shown below:

- 0.125 PWM
- 0.25 PWM
- 0.5 PWM
- 1 PWM
- 2 PWM
- 4 PWM
- 8 PWM


- 15 PWM

The following system parameters and values are shown. The system parameters that are monitored are:

- **System Temperatures:** The following system temperatures are monitored
 - CPU Temperature
 - System Temperature
- **Fan Speeds:** The CPU cooling fan speed is monitored.
 - CPU Fan Speed
- **Voltages:** The following system voltages are monitored
 - CPU Core
 - +1.05V
 - +3.30V
 - +5.00V
 - +12.0 V
 - +1.5V
 - +1.8V
 - 5VSB
 - VBAT

1.3.5 Power Configuration


The **Power Configuration** menu (**BIOS Menu 8**) configures the Advanced Configuration and Power Interface (ACPI) and Power Management (APM) options.

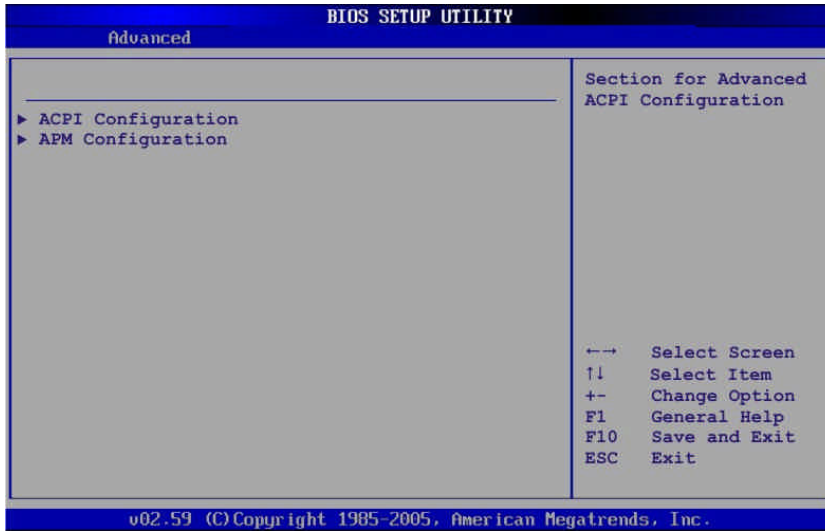

BIOS Menu 8: Power Configuration

1.3.5.1 ACPI configuration

The **ACPI Configuration** menu (**BIOS Menu 9**) configures the Advanced Configuration and Power Interface (ACPI).

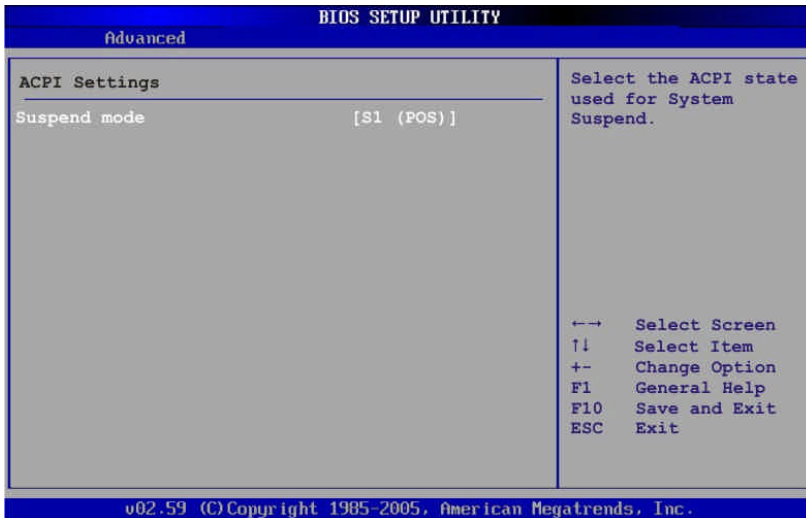

BIOS Menu 9: ACPI Configuration

→ **Suspend Mode [S1(POS)]**


Use the **Suspend Mode** BIOS option to specify the sleep state the system enters when it is not being used.

→ **S1 (POS) DEFAULT** System appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.

→ **S3 (STR)** System appears off. The CPU has no power; RAM is in slow refresh; the power supply is in a reduced power mode.

1.3.6 APM Configuration

The **APM Configuration** menu (**BIOS Menu 10**) allows the advanced power management options to be configured.

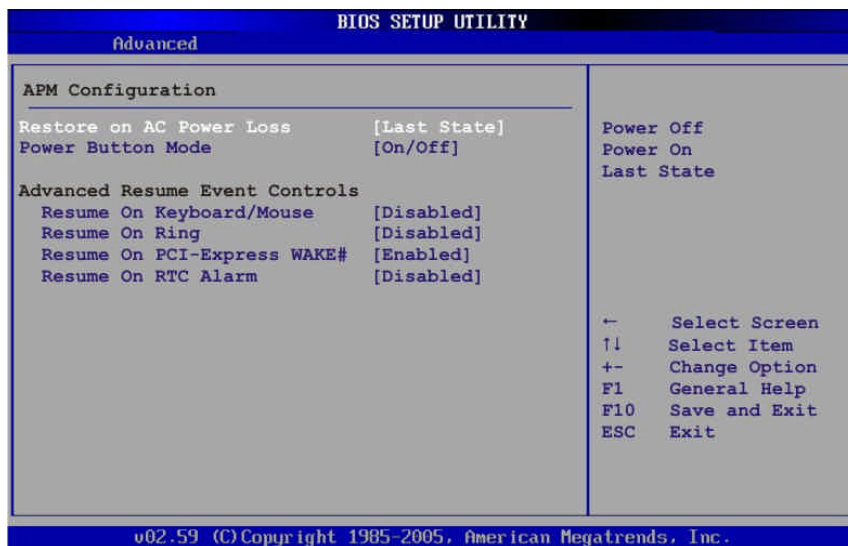

BIOS Menu 10: Advanced Power Management Configuration

→ **Restore on AC Power Loss [Last State]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** The system remains turned off
- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ **Power Button Mode [On/Off]**

Use the **Power Button Mode** BIOS to specify how the power button functions.

- **On/Off** **DEFAULT** When the power button is pressed the system is either turned on or off
- **Suspend** When the power button is pressed the system goes into suspend mode

→ **Resume on Keyboard/Mouse [Disabled]**

Use the **Resume on Keyboard/Mouse** BIOS option to enable activity on either the keyboard or mouse to rouse the system from a suspend or standby state. That is, the system is roused when the mouse is moved or a button on the keyboard is pressed.

- **Disabled** **DEFAULT** Wake event not generated by activity on the keyboard or mouse
- **Resume On Keyboard** Wake event not generated by activity on the keyboard
- **Resume On Mouse** Wake event not generated by activity on the mouse
- **Enabled** Wake event generated by activity on the keyboard or mouse

→ **Resume on Ring [Disabled]**

Use the **Resume on Ring** BIOS option to enable activity on the RI (ring in) modem line to rouse the system from a suspend or standby state. That is, the system will be roused by an incoming call on a modem.

- **Disabled** **DEFAULT** Wake event not generated by an incoming call
- **Enabled** Wake event generated by an incoming call

→ **Resume on PCI-Express WAKE# [Enabled]**

Use the **Resume PCI-Express WAKE#** BIOS option to enable activity on the PCI-Express WAKE# signal to rouse the system from a suspend or standby state.

- **Disabled** Wake event not generated by PCI-Express WAKE# signal activity
- **Enabled** **DEFAULT** Wake event generated by PCI-Express WAKE# signal activity

→ **Resume On RTC Alarm [Disabled]**

Use the **Resume On RTC Alarm** option to specify the time the system should be roused from a suspended state.

- **Disabled** **DEFAULT** The real time clock (RTC) cannot generate a wake event
- **Enabled** If selected, the following appears with values that can be selected:


→ **RTC Alarm Date (Days)**

→ **System Time**

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

1.3.7 Remote Configuration

Use the **Remote Access Configuration** menu (**BIOS Menu 11**) to configure remote access parameters. The **Remote Access Configuration** is an AMIBIOS feature and allows a remote host running a terminal program to display and configure the BIOS settings.

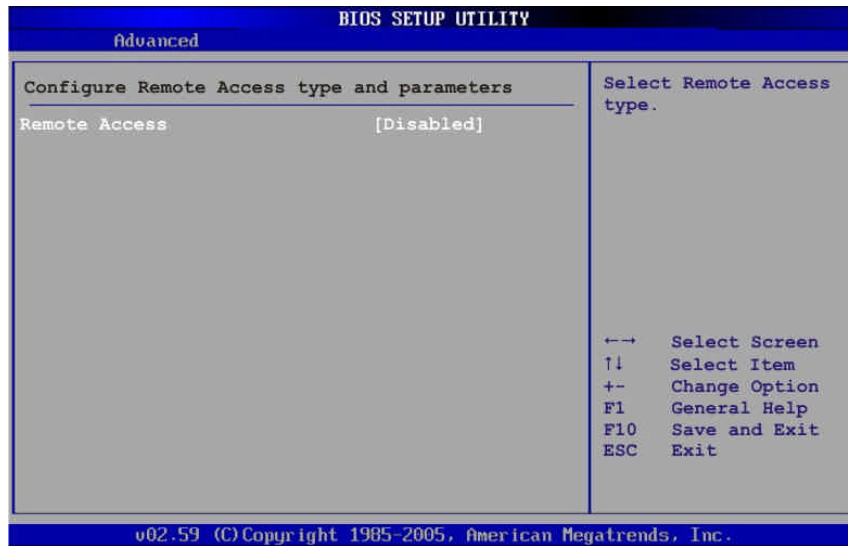

BIOS Menu 11: Remote Access Configuration [Advanced]

➔ **Remote Access [Disabled]**

Use the **Remote Access** option to enable or disable access to the remote functionalities of the system.

➔ **Disabled** **DEFAULT** Remote access is disabled.

➔ **Enabled** Remote access configuration options shown below appear:

➔ **Serial Port Number**

➔ **Serial Port Mode**

➔ **Redirection after BIOS POST**

➔ **Terminal Type**

These configuration options are discussed below.

→ **Serial Port Number [COM1]**

Use the **Serial Port Number** option allows to select the serial port used for remote access.

- **COM1** **DEFAULT** System is remotely accessed through COM1
- **COM2** System is remotely accessed through COM2
- **COM3** System is remotely accessed through COM3

NOTE: Make sure the selected COM port is enabled through the Super I/O configuration menu.

→ **Base Address, IRQ [3F8h,4]**

The **Base Address, IRQ** option cannot be configured and only shows the interrupt address of the serial port listed above.

→ **Serial Port Mode [115200 8,n,1]**

Use the **Serial Port Mode** option to select baud rate through which the console redirection is made. The following configuration options are available

- 115200 8,n,1 **DEFAULT**
- 57600 8,n,1
- 38400 8,n,1
- 19200 8,n,1
- 09600 8,n,1



NOTE:

Identical baud rate setting must be set on the host (a management computer running a terminal software) and the slave

→ **Redirection After BIOS POST [Always]**

Use the **Redirection After BIOS POST** option to specify when console redirection should occur.

- ➔ **Disabled** The console is not redirected after POST
- ➔ **Boot Loader** Redirection is active during POST and during Boot Loader
- ➔ **Always** **DEFAULT** Redirection is always active (Some OSes may not work if set to Always)


➔ **Terminal Type [ANSI]**

Use the **Terminal Type** BIOS option to specify the remote terminal type.

- ➔ **ANSI** **DEFAULT** The target terminal type is ANSI
- ➔ **VT100** The target terminal type is VT100
- ➔ **VT-UTF8** The target terminal type is VT-UTF8

1.3.8 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 12**) to read USB configuration information and configure the USB settings.

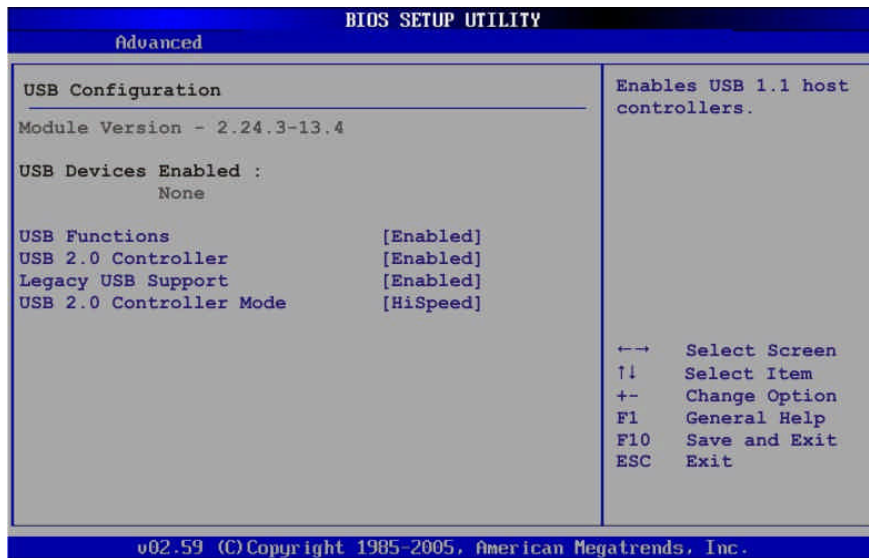

BIOS Menu 12: USB Configuration

→ **USB Functions [Enabled]**

Use the **USB Function** option to enable or disable the USB controllers.

- **Disabled** USB controllers are enabled
- **Enabled** **DEFAULT** USB controllers are disabled

→ **USB 2.0 Controller [Enabled]**

The **USB 2.0 Controller** BIOS option enables or disables the USB 2.0 controller

- **Enabled** **DEFAULT** USB function enabled
- **Disabled** USB function disabled

→ **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- **Disabled** Legacy USB support disabled
- **Enabled** **DEFAULT** Legacy USB support enabled
- **Auto** Legacy USB support disabled if no USB devices are connected

→ **USB2.0 Controller Mode [HiSpeed]**

The **USB2.0 Controller Mode** BIOS option sets the speed of the USB2.0 controller.

- **FullSpeed** The controller is capable of operating at full speed 12 Mb/s

- **HiSpeed** **DEFAULT** The controller is capable of operating at high speed 480 Mb/s


1.4 PCI/PnP

Use the PCI/PnP menu (**BIOS Menu 13**) to configure advanced PCI and PnP settings.



WARNING:

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

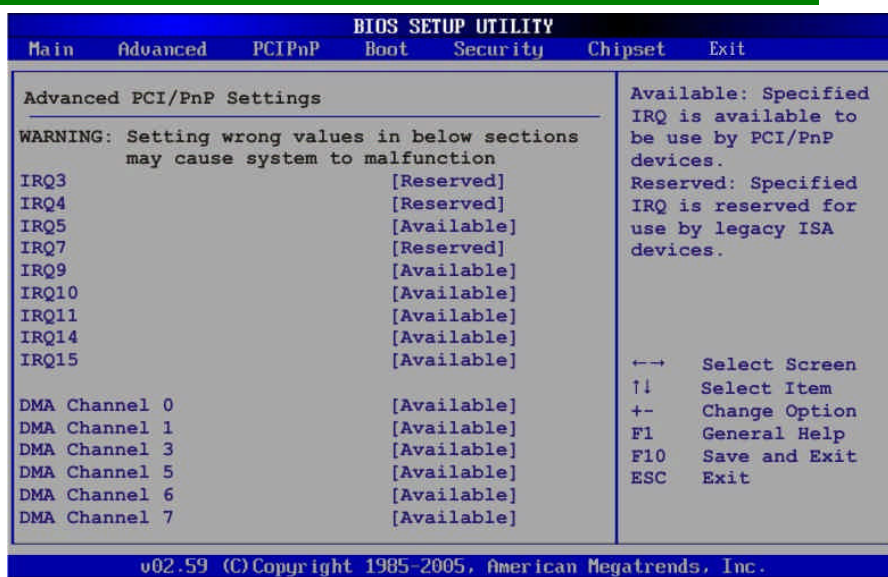

BIOS Menu 13: PCI/PnP Configuration

- **IRQ#** [Available]

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

- **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices

→ **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9
- IRQ10
- IRQ 11
- IRQ 14
- IRQ 15

→ **DMA Channel# [Available]**

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

→ **Available** **DEFAULT** The specified DMA is available to be used by PCI/PnP devices

→ **Reserved** The specified DMA is reserved for use by Legacy ISA devices

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

→ **Reserved Memory Size [Disabled]**

Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

- **Disabled** **DEFAULT** No memory block reserved for legacy ISA devices
- **16K** 16KB reserved for legacy ISA devices
- **32K** 32KB reserved for legacy ISA devices
- **64K** 54KB reserved for legacy ISA devices

1.5 Boot


Use the Boot menu (**BIOS Menu 14**) to configure system boot options.



BIOS Menu 14: Boot

1.5.1 Boot Settings Configuration

Use the Boot Settings Configuration menu (**BIOS Menu 15**) to configure advanced system boot options.

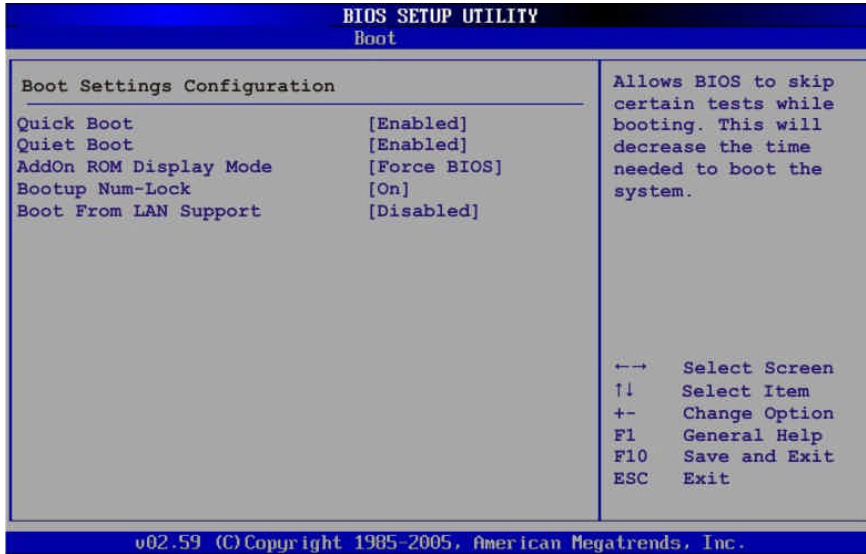

BIOS Menu 15: Boot Settings Configuration

→ Quick Boot [Enabled]

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

- **Disabled** No POST procedures are skipped
- **Enabled** **DEFAULT** Some POST procedures are skipped to decrease the system boot time

→ Quiet Boot [Disabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** **DEFAULT** Normal POST messages displayed
- **Enabled** OEM Logo displayed instead of POST messages

→ **AddOn ROM Display Mode [Force BIOS]**

The **AddOn ROM Display Mode** option allows add-on ROM (read-only memory) messages to be displayed.

- **Force BIOS** **DEFAULT** Allows the computer system to force a third party BIOS to display during system boot.
- **Keep Current** Allows the computer system to display the information during system boot.

→ **Bootup Num-Lock [On]**

The **Bootup Num-Lock** BIOS option allows the Number Lock setting to be modified during boot up.

- **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.
- **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.


→ **Boot From LAN Support [Disabled]**

The **BOOT From LAN Support** option enables the system to be booted from a remote system.

- **Enabled** Can be booted from a remote system through the LAN
- **Disabled** **DEFAULT** Cannot be booted from a remote system through the LAN

1.6 Security

Use the Security menu (**BIOS Menu 16**) to set system and user passwords.

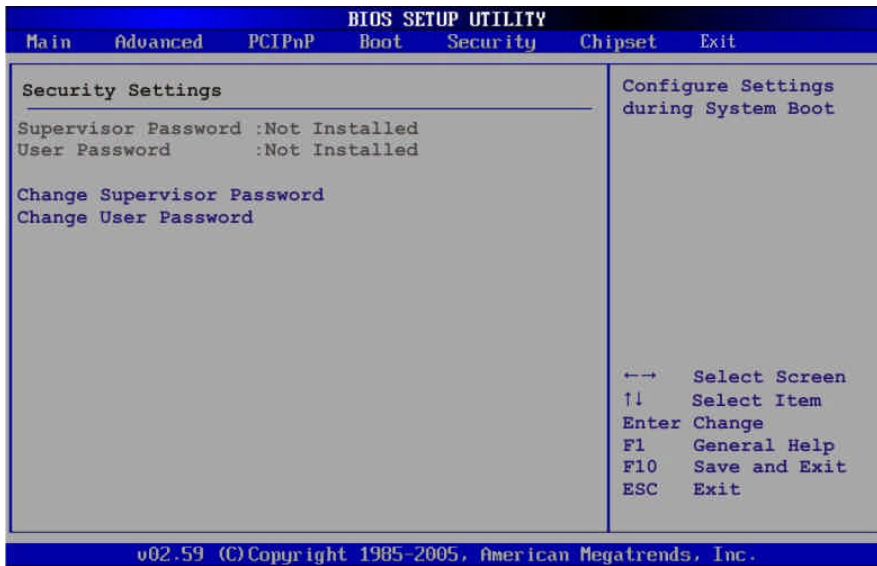

BIOS Menu 16: Security

→ Change Supervisor Password

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

→ Change User Password

Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change User Password**.


1.7 Chipset

Use the **Chipset** menu (**BIOS Menu 17**) to access the NorthBridge and SouthBridge configuration menus



WARNING!


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

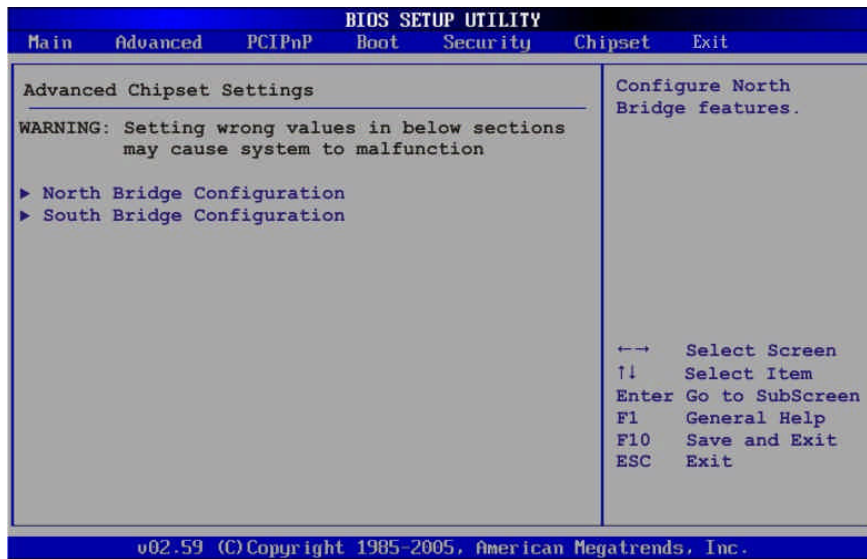

BIOS Menu 17: Chipset

1.7.1 North Bridge Chipset Configuration

Use the **North Bridge Chipset Configuration** menu (**BIOS Menu 18**) to configure the Northbridge chipset settings.

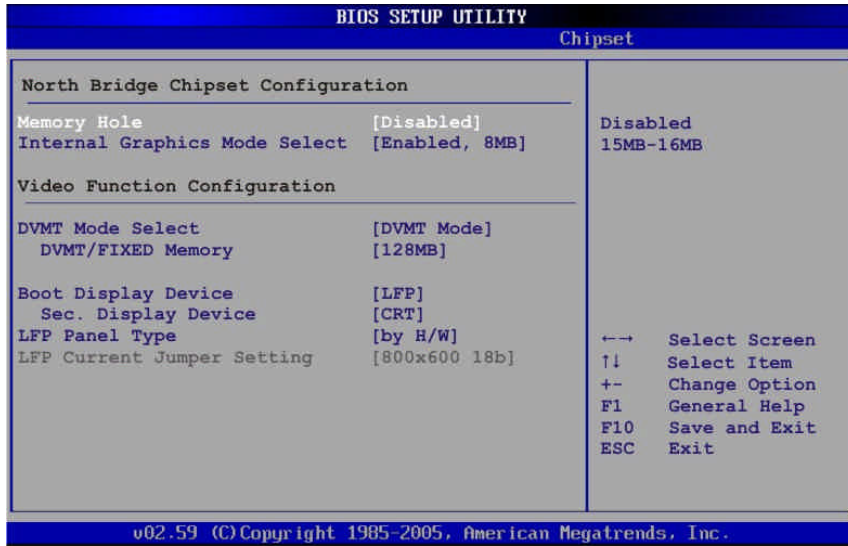

BIOS Menu 18:North Bridge Chipset Configuration

→ Memory Hole [Disabled]

The **Memory Hole** reserves the memory space between 15MB and 16MB for ISA expansion cards that require a specified area of memory to work properly. If an older ISA expansion card is used, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

- **Disabled** **DEFAULT** Memory is not reserved for ISA expansion cards
- **Enabled** Memory is reserved for ISA expansion cards

→ Internal Graphics Mode Select [Enable, 8MB]

The **Internal Graphic Mode Select** option determines the amount of system memory that can be used by the Internal graphics device.

- **Disable**
- **Enable, 1MB** 1MB of memory used by internal graphics device
- **Enable, 8MB** **DEFAULT** 8MB of memory used by internal graphics device

→ **Sec. Display Device [CRT]**

Use the **Sec. Display Device** option to select the second display device used by the system. Configuration options are listed below.

- Disabled
- CRT **DEFAULT**


→ **LFP Panel Type [by H/W]**

Use the **LFP Panel Type** option to select the type of flat panel connected to the system. Configuration options are listed below.

- 640x480 18b
- 800x480 18b
- 800x600 18b
- 1024x768 18b
- 1280x1024 36b
- 1400x1050 36b
- 1440x900 36b
- 1600x1200 36b
- by H/W **DEFAULT**

1.7.2 SouthBridge Configuration

The **SouthBridge Configuration** menu (**BIOS Menu 19**) the southbridge chipset to be configured.

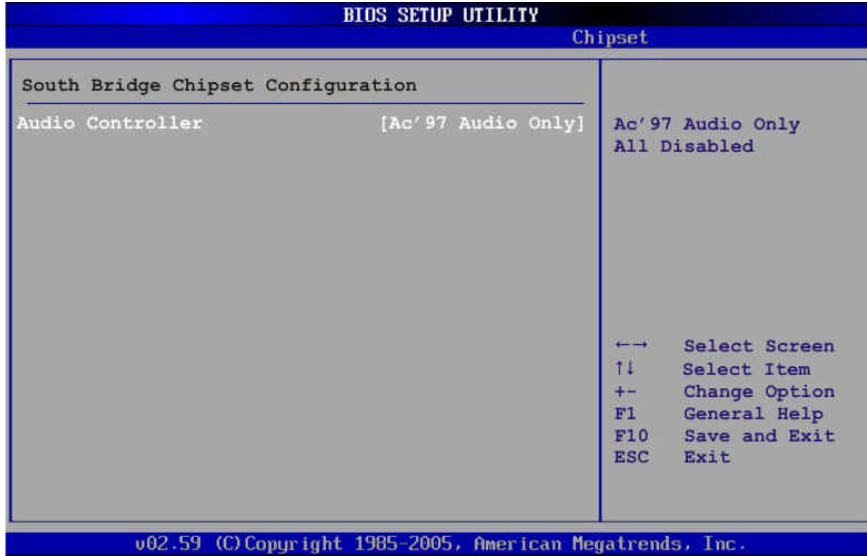

BIOS Menu 19: SouthBridge Chipset Configuration


→ Audio Controller [AC'97 Audio Only]

The **Audio Controller** option enables or disables the audio controller.

- **AC'97 Audio Only** The on-board AC'97 audio controller is enabled.
- **All Disabled** **DEFAULT** The on-board audio controller is disabled.

1.8 Exit

Use the **Exit** menu (**BIOS Menu 20**) to load default BIOS values, optimal failsafe values and to save configuration changes.

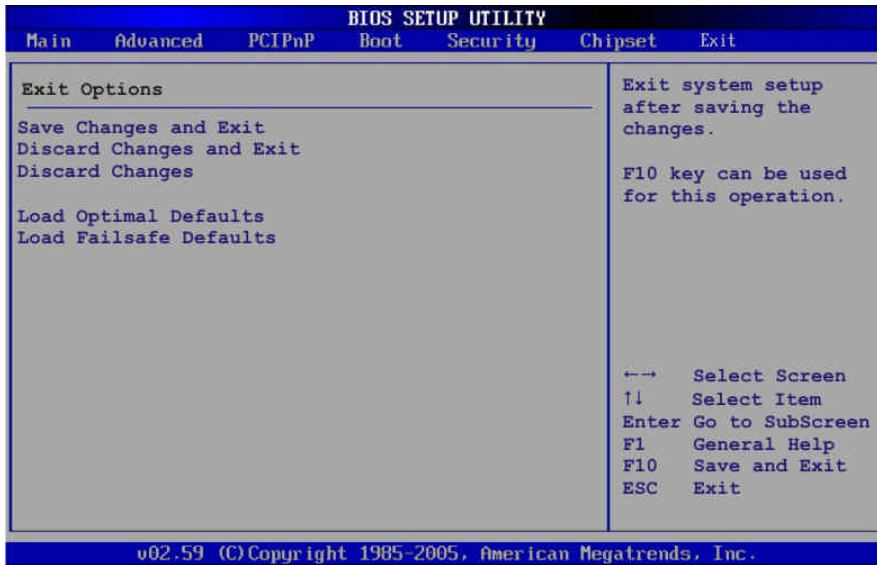

BIOS Menu 20:Exit

→ Save Changes and Exit

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

→ Discard Changes and Exit

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

→ Discard Changes

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

→ Load Optimal Defaults

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

→ **Load Failsafe Defaults**

Use the **Load Failsafe Defaults** option to load failsafe default values for each of the parameters on the Setup menus. **F8 key can be used for this operation.**

Chapter

7

Software Drivers

2.1 Available Software Drivers



NOTE:

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice.

The following drivers can be installed on the system:

- Chipset
- VGA
- Audio
- LAN
- Touch screen
- Bluetooth
- Wireless

Installation instructions are given below.

2.2 Starting the Driver Program

To access the driver installation programs, please do the following.

Insert the CD-ROM that came with the system into a CD-ROM drive attached to the system.

Click **SP-xx00-72 Series**.

Select the **AFLMB-945GSE-R10**.

The list of drivers in **Figure 2-1** appears.

Figure 2-1: Drivers

0.1 Chipset Driver Installation

To install the chipset driver, please do the following.

Access the driver list shown in **Figure 2-1**. (See **Section 2.2**)

Click "**Chipset**" and double click "**Setup.exe**".

The setup files are extracted as shown in **Figure 2-2**.

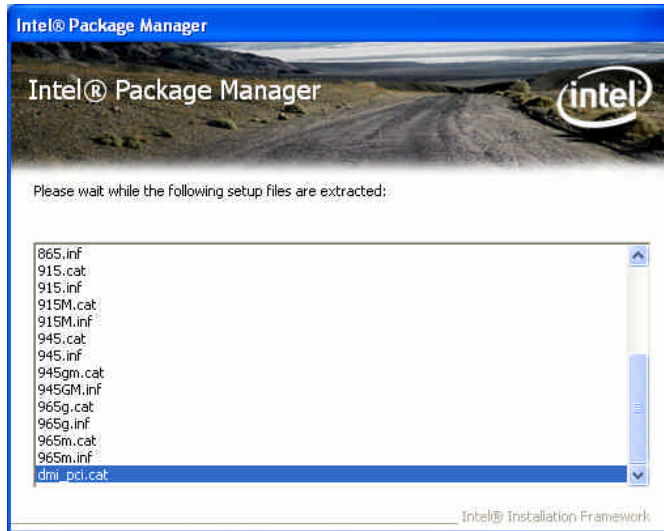


Figure 2-2: Chipset Driver Screen

When the setup files are completely extracted the **Welcome Screen** in **Figure 2-3** appears.



Figure 2-3: Chipset Driver Welcome Screen

Click **Next** to continue.

The license agreement in **Figure 2-4** appears.

Read the **License Agreement**.

Click the **Yes** icon to continue.



Figure 2-4: Chipset Driver License Agreement

The Read Me file in **Figure 2-5** appears.

Click **Next** to continue.

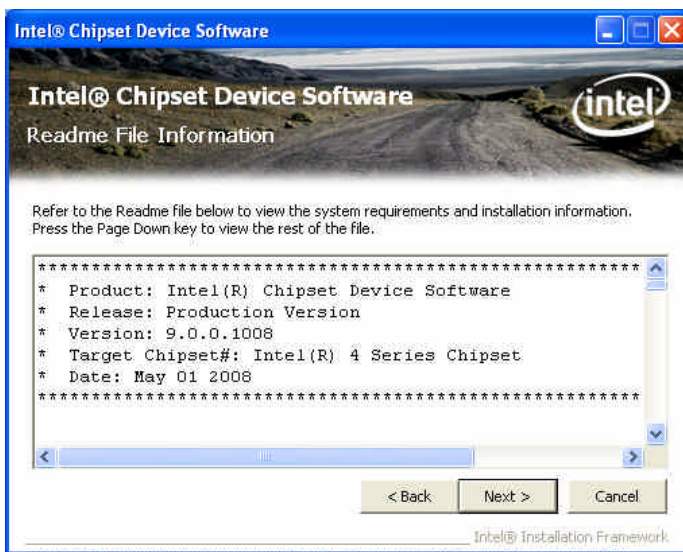


Figure 2-5: Chipset Driver Read Me File

Setup Operations are performed as shown in **Figure 2-6**.



Figure 2-6: Chipset Driver Setup Operations

Once the **Setup Operations** are complete, click the **Next** icon to continue.

The **Finish** screen appears.

Select "**Yes, I want to restart the computer now**" and click the **Finish** icon. See **Figure**

2-7.



Figure 2-7: Chipset Driver Installation Finish Screen

0.1 VGA Driver Installation

To install the VGA driver, please do the following.

Access the driver list shown in **Figure 2-1**. (See **Section 2.2**)

Click **“VGA”** and double click the **“win2k_xp14324.exe”** file.

The VGA Read Me file in **Figure 2-8** appears.

Click **Next** to continue.

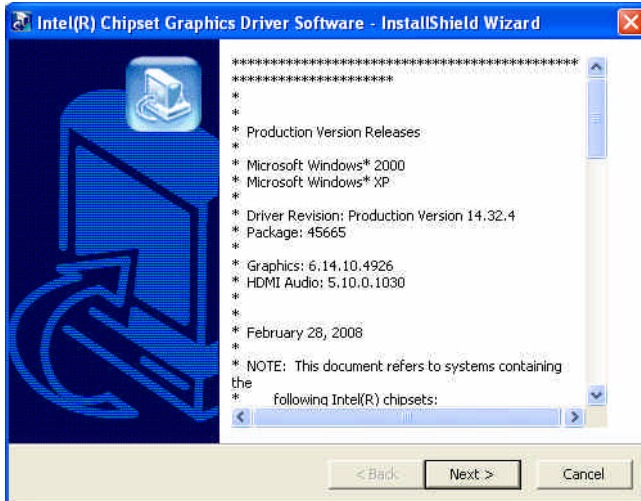


Figure 2-8: VGA Driver Read Me File

The installation files are extracted. See **Figure 2-9**.

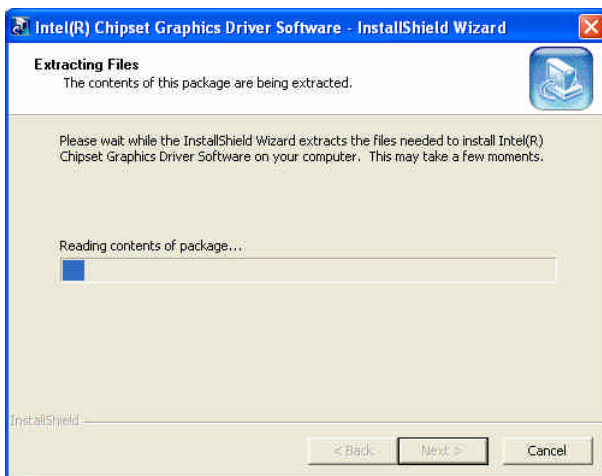


Figure 2-9: VGA Driver Setup Files Extracted

The **Welcome Screen** in **Figure 2-10** appears.



Figure 2-10: VGA Driver Welcome Screen

Click **Next** to continue.

The license agreement in **Figure 2-11** appears.

Read the **License Agreement**.

Click the **Yes** icon to continue.

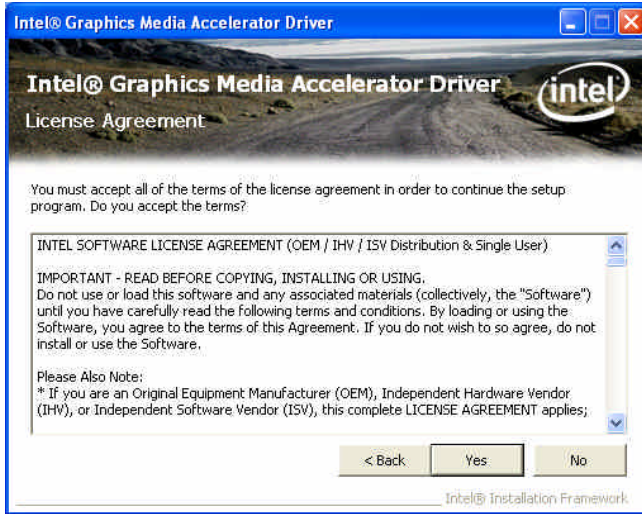


Figure 2-11: VGA Driver License Agreement

The Read Me file in **Figure 2-12** appears.

Click **Next** to continue.

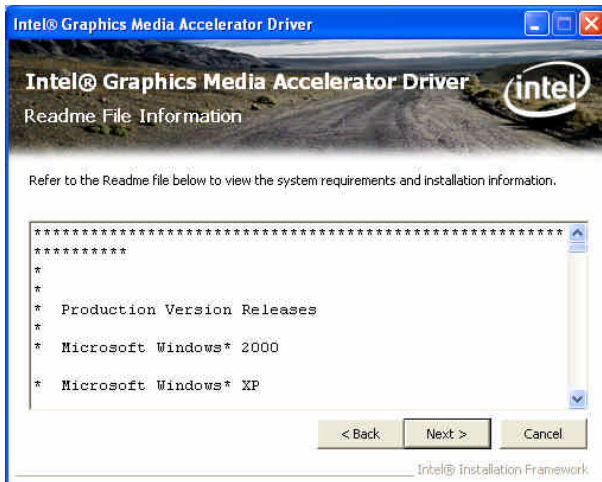


Figure 2-12: VGA Driver Read Me File

Setup Operations are performed as shown in **Figure 2-13**.

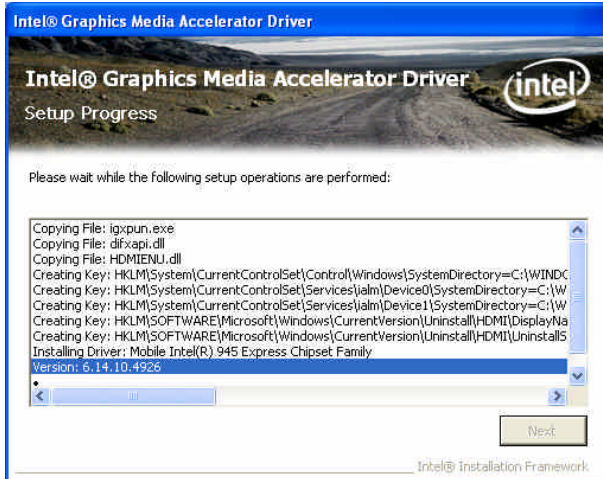


Figure 2-13: VGA Driver Setup Operations

Once the **Setup Operations** are complete, click the **Next** icon to continue.

The **Finish** screen appears.

Select “**Yes, I want to restart the computer now**” and click the **Finish** icon. See **Figure**

2-14.

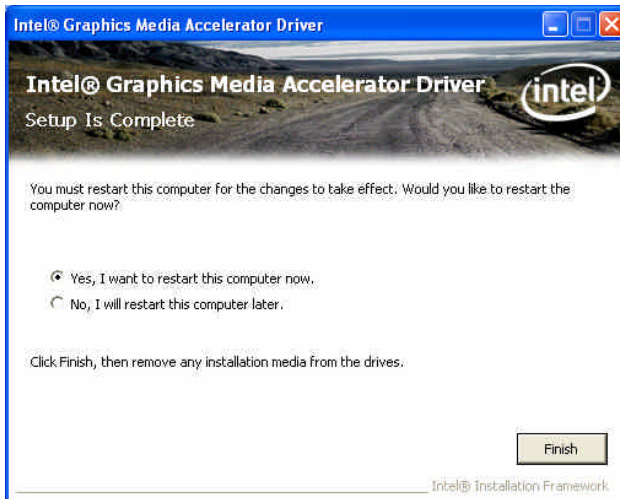


Figure 2-14: VGA Driver Installation Finish Screen

0.1 Audio Driver Installation

To install the audio driver, please do the following.

Access the driver list shown in **Figure 2-1**. (See **Section 2.2**)

Click **“Audio”**

The screen in **Figure 2-15** appears. Double click the **“WDM_A404”** folder.



Figure 2-15: Audio Driver Options

Click the **setup.exe** icon.

The AC'97 Driver Installation screen in **Figure 2-16** appears.

Click **Next** to continue.

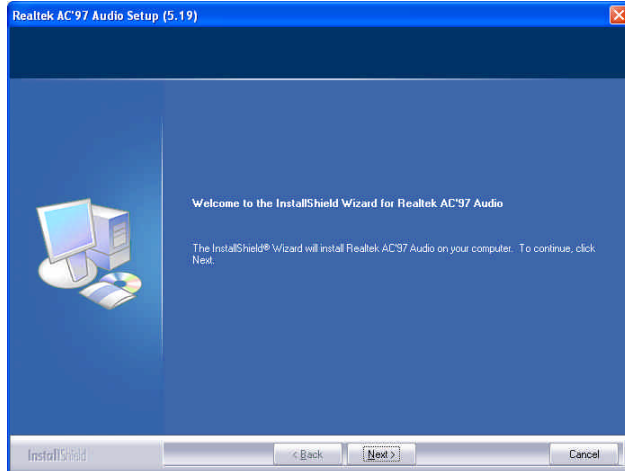


Figure 2-16: AC'97 Driver Installation Welcome Screen

The Verification window in **Figure 2-17** may appear.

Click **“Continue Anyway.”**



Figure 2-17: AC'97 Driver Installation Verification

The driver installation begins. See **Figure 2-18**.

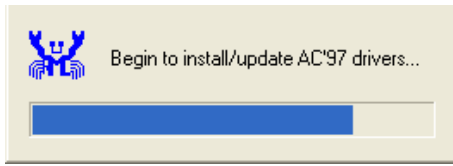


Figure 2-18: AC'97 Driver Installation

When the driver is installed, the driver installation finish screen in **Figure 2-19** appears.

Select **"Yes, I wish to restart my computer now"** And click **Finish**

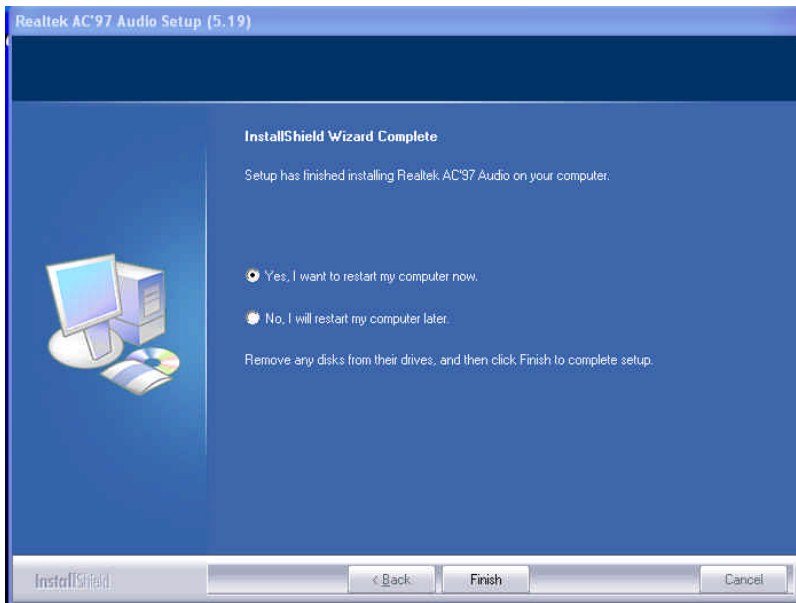


Figure 2-19: AC'97 Driver Installation Complete

The system reboots.

0.1 LAN Driver Installation

To install the LAN driver, please do the following.

Access the driver list shown in **Figure 2-1**. (See **Section 2.2**)

Click **"LAN"** and locate the **setup.exe**. Double click the setup.exe file to start installing the

LAN driver.

The **Welcome** screen in **Figure 2-20** appears.

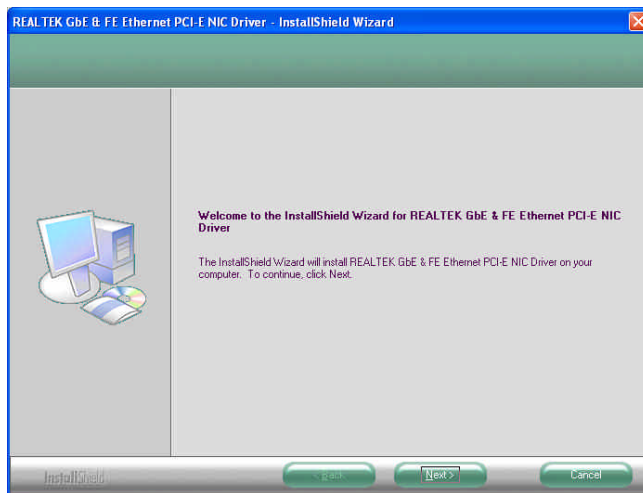


Figure 2-20: LAN Driver Welcome Screen

Click **Next** to continue.

The **Ready to Install** screen in **Figure 2-21** appears.

Click **Next** to proceed with the installation.

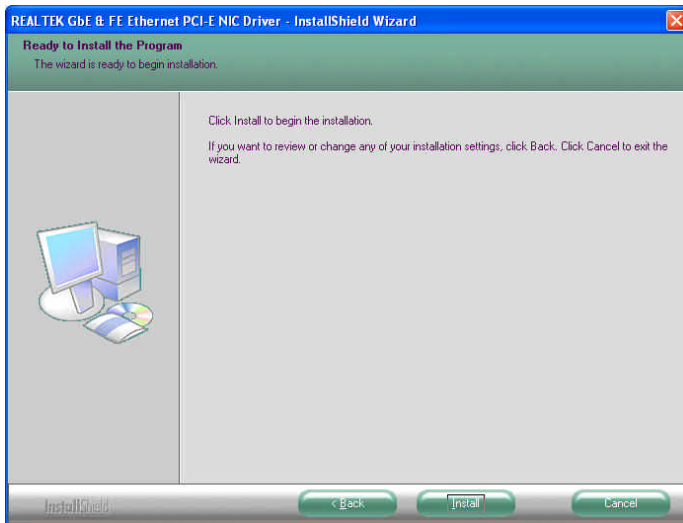


Figure 2-21: LAN Driver Welcome Screen

The program begins to install.

The installation progress can be monitored in the progress bar shown in **Figure 2-22**.

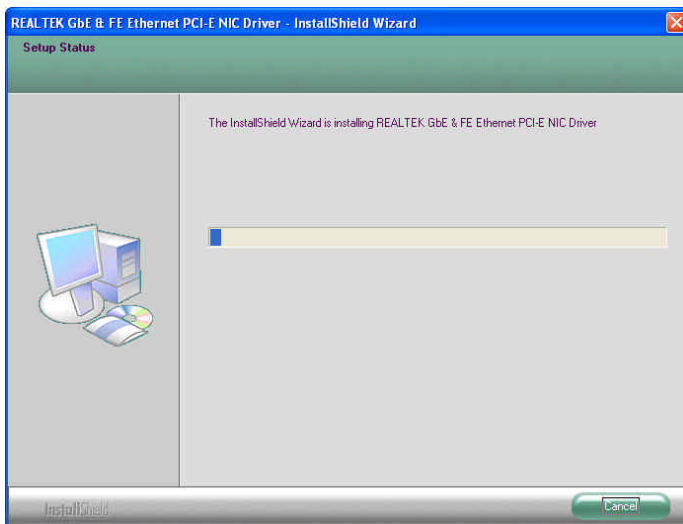


Figure 2-22: LAN Driver Installation

When the driver installation is complete, the screen in **Figure 2-23** appears.

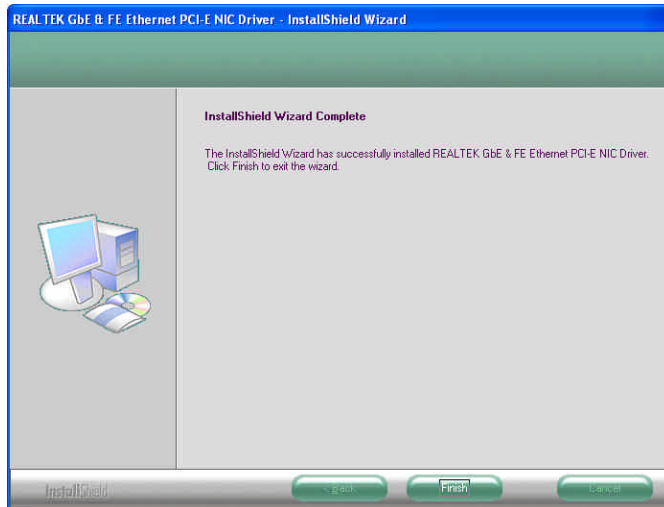


Figure 2-23: LAN Driver Installation Complete

0.1 Touch Screen Driver

To install the touch panel software driver, please follow the steps below.

Access the driver list shown in **Figure 2-1**. (See **Section 2.2**)

Click "**Touch Screen**". Open the **x:\Touch\PenMount Windows Universal Driver**

V2.0.0.107 directory and locate the icon for the **Setup.exe** installation file. Once located, use the mouse to double click the icon.

A welcome screen appears (**Figure 2-24**). To continue the installation process click **NEXT**.

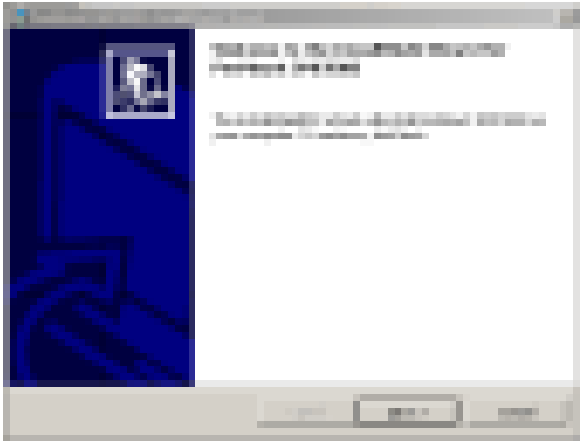


Figure 2-24: Welcome Screen

The license agreement shown in Figure 2-25 appears. Agree to the license by selecting “I accept the terms in the license agreement”.

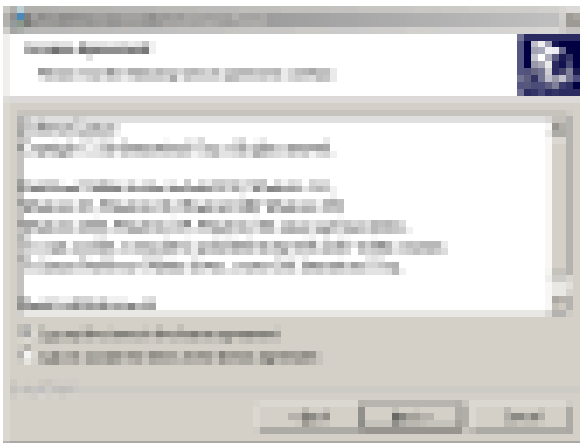


Figure 2-25: License Agreement

Click **NEXT** and the Installshield Wizard is ready to install the program (Figure 2-26).

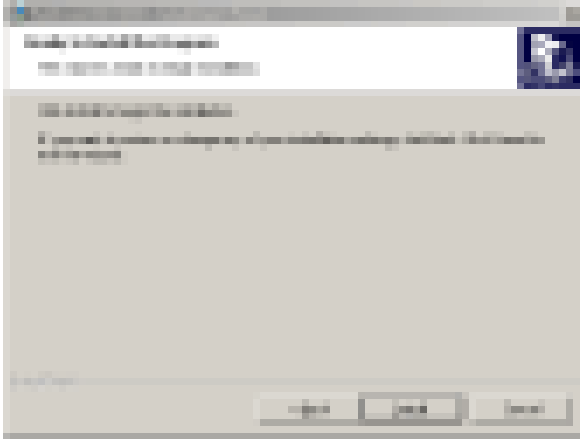


Figure 2-26: Ready to Install the Program

Click **INSTALL** to continue. The Installing PenMount DMC9000 screen appears as the program is installed (Figure 2-27).

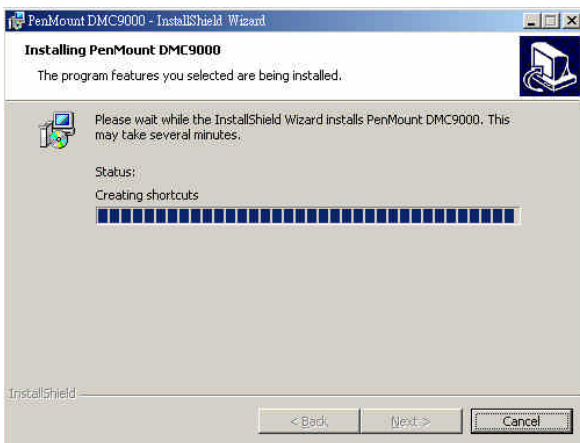


Figure 2-27: Installing PenMount DMC9000

The user is then prompted to select to restart the computer now or later (Figure 2-28).

For the settings to take effect, the computer must be restarted. Click **Yes** to restart the computer. 0

Formatted: Bullets and Numbering



Figure 2-28: Reboot the Computer

0.1 Bluetooth Driver

To install the Bluetooth software driver, please follow the steps below.

Select **Bluetooth** from the list in **Figure 2-1**.

A new window opens (**Figure 2-29**). Click the **Setup.exe** to install the touch screen driver.

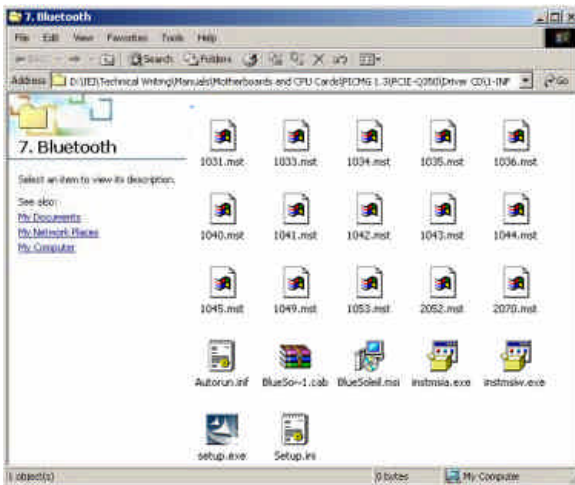


Figure 2-29: Bluetooth Driver Icon

A welcome screen appears (**Figure 2-30**). To continue the installation process click **NEXT**.

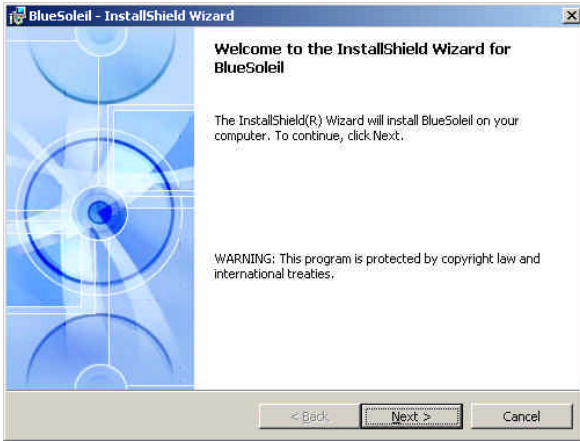


Figure 2-30: Welcome Screen

The license agreement shown in **Figure 2-31** appears. Agree to the license by selecting "I accept the terms in the license agreement".



Figure 2-31: License Agreement

The **Custom Settings** screen in **Figure 2-32** appears next.

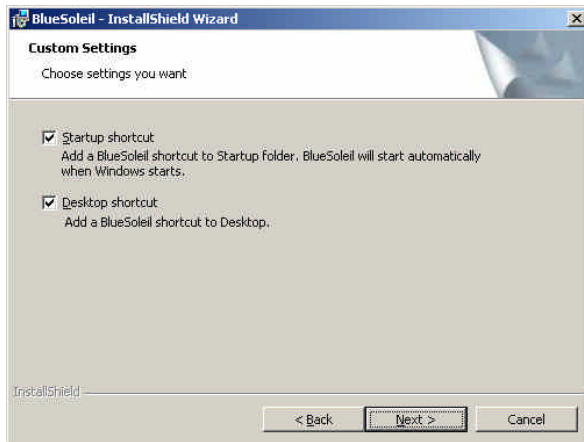


Figure 2-32: Bluetooth Driver Setup Options

Select the required installation configuration in **Figure 2-32** and click **NEXT** to continue.

The **Destination Folder** screen in **Figure 2-33** appears next. Confirm the destination folder to install the Bluetooth driver.

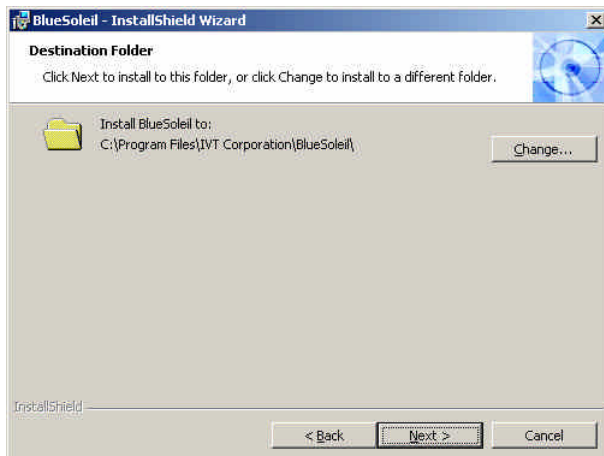


Figure 2-33: Bluetooth Driver Destination Folder

Click **NEXT** and the Installshield Wizard is ready to install the program (**Figure 2-34**).

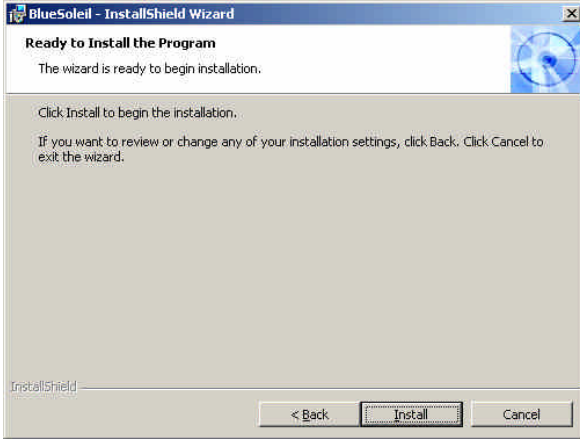


Figure 2-34: Ready to Install the Program

Click **INSTALL** to continue. The Installing BlueSoleil screen appears as the program is installed (**Figure 2-35**).

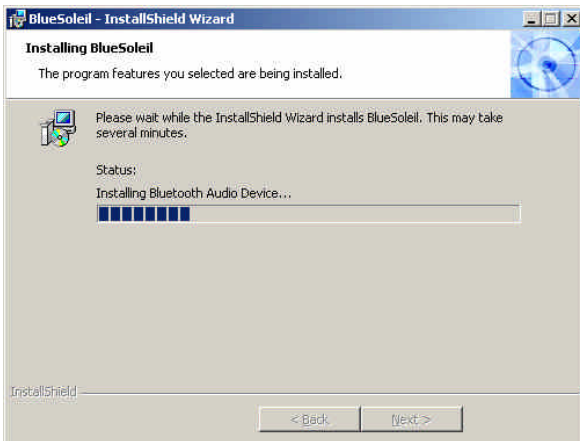


Figure 2-35: Installing BlueSoleil

When the installation process is complete, the Setup Complete screen appears. See **Figure 2-36**.

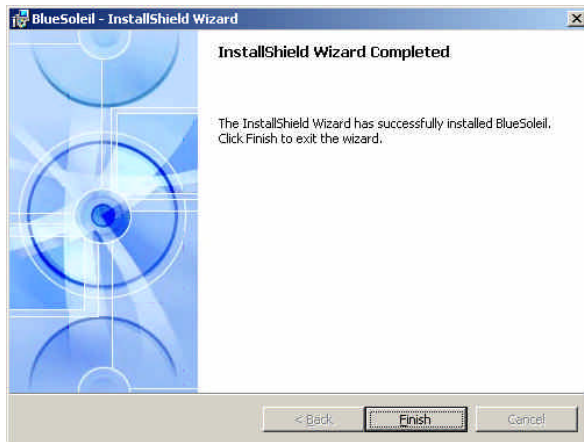


Figure 2-36: Bluetooth Driver Complete Installation Screen

To complete the chipset driver installation, click **FINISH**. The user is then prompted to select to restart the computer now or later (**Figure 2-37**). For the settings to take effect, the computer must be restarted. Click **Yes** to restart the computer. [0](#)

Formatted: Bullets and Numbering



Figure 2-37: Reboot the Computer

0.1 Wireless Driver

To install the wireless driver, please follow the steps below.

Select **Wireless** from the list in **Figure 2-1**.

A new window opens (**Figure 2-38**). Select an OS folder. Double click the **Setup.exe** to install the LAN driver.

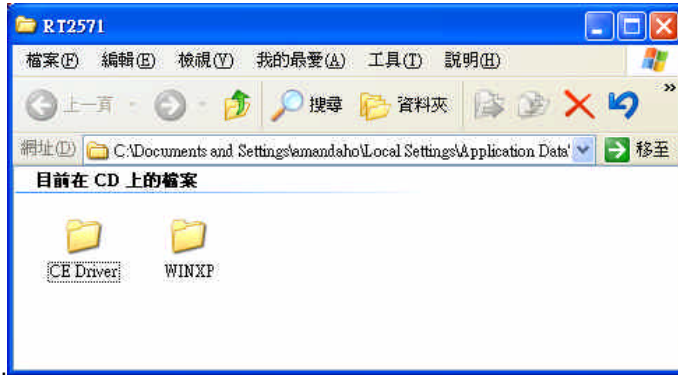


Figure 2-38: Wireless Driver OS Folders

The license agreement in **Figure 2-39** appears.

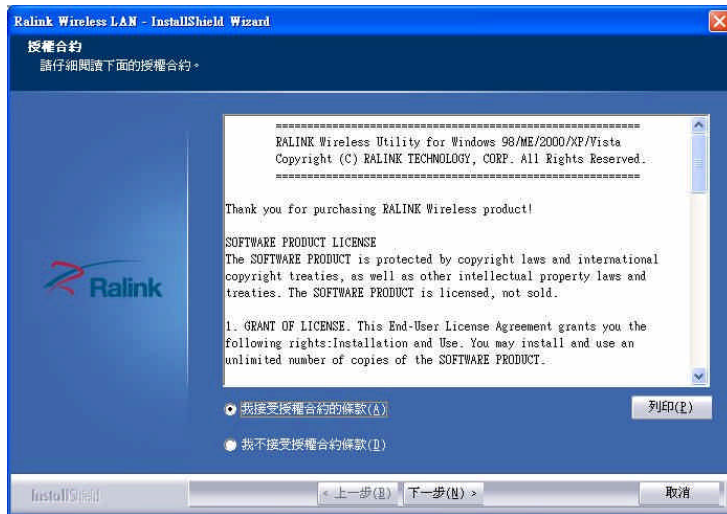


Figure 2-39: Wireless Driver License Agreement

Accept the conditions of the license agreement and click **NEXT** to continue.

The **Configuration Tool Options** screen in **Figure 2-40** appears next.



Figure 2-40: Wireless Driver Configuration Tool Options

Select configuration tool in **Figure 2-40** and click **NEXT** to continue.

The **Wireless Mode Options** window in **Figure 2-41** appears.



Figure 2-41: Wireless Mode Select Window

Click **NEXT** in **Figure 2-41**.

Click **INSTALL** in **Figure 2-42** to start to install the driver.



Figure 2-42: Wireless Driver Installation

When the installation is finished. Click **FINISH** in the termination screen. 

Formatted: Bullets and Numbering

Appendix

A

System Specifications

A.1 Motherboard Specifications

The system comes with an AFLMB-945GSE motherboard. The detailed specifications for the motherboard are listed below.

Specification	AFLMB-945GSE
Northbridge	Intel® 945GSE
Southbridge	Intel® ICH7
Processor	1.6 GHz Intel® Atom™ N270 processor
FSB Speed	533 MHz
Supported Memory	One 200-pin 2.0 GB (max.) 533 MHz or 400 MHz DDR2 SDRAM SO-DIMM (system max. 2.0 GB)
System BIOS	AMI BIOS
Hard disk drives	Two SATA drives
VGA	Integrated in the Intel® 945GSE
LAN	Realtek RTL8111CP PCIe GbE Controllers
Expansion Options	One PCIe Mini
Super I/O	ITE IT8718F
Audio Codec	RealTek ALC655
Audio Amplifier	NXP TDA1517P
USB	Two external USB 2.0 ports Two internal pin headers
RS-232	Fintek
FAN connector	One 4-pin CPU fan connector
Extra-Module	Bluetooth Module (USB protocol BT-330C-V2)

A.2 Processor Specifications

The N270 Intel® Atom™ processor specifications are given below.

Parameter	Specifications
CPU Speed	1.6 GHz
Bus Speed	533 MHz
L2 Cache Size	512 KB
L2 Cache Speed	1.6 GHz

Manufacturing Technology	45 nm
L1 Cache	32 KB instruction cache 24 KB write-back data cache
Thermal Design Power	2.5 W
Tjunction	0 to 90°C

A.3 Screen Specifications

The SP-xx00-72 comes with a TFT LCD monitor at the front of the flat panel PC.

Specifications for the screens are shown below.

SPECIFICATION	SP-700-72	SP-800-72	SP-1000-72	SP-1200-72
Size	7"	8.4"	10.4"	12.1"
Resolution	800 x 480 (VGA)	800 x 600 (SVGA)	800 x 600 (SVGA)	1024 x 768 (XGA)
Pixel Pitch (mm)	0.0635 x 0.1905	0.213 x 0.213	0.264 x 0.264	0.3057 x 0.3057
LCD Color	Native 262K colors	Native 262K colors	Native 262K colors	Native 262K colors
View Angel (H/V)	140/110	160/140	160/140	160/160
Brightness (cd/m²)	400	450	400	500
Contrast Ratio	400:1	600:1	700:1	700:1
Backlight	LED	LED	LED	LED
RGB Bit	6-bit	6-bit	6-bit	6-bit

A.4 Touch Screen Specifications

The SP-xx00-72 series comes with an analog resistive type touch panel. The touch panel specifications are listed below.

SPECIFICATION	SP-700-72	SP-800-72	SP-1000-72	SP-1200-72
Model	PANJIT 1070404C	PANJIT 1084403B	PANJIT 1104502A	PANJIT 1121505B
Type	Analog Resistive Type Touch Panel			
Wire Type	4-wire	4-wire	5-wire	5-wire
Viewing Area (mm)	154.90 x 93.94	130.75 x 173.38	219.8 x 166.8	188.0 x 250.0
Active Area (mm)	152.40 x 91.44	127.78 x 170.38	212.1 x 159.3	185.0 x 246.0
Total Transmission	78%			
Maximum Voltage	DC7V			
Connector Type	FPC.			
Operating Temperature	-10°C ~ 60°C	-10°C ~ 40°C	-10°C ~ 50°C	
Operating Humidity	20% ~ 90% RH			
Storage Temperature	-20°C ~ 70°C			
Storage Humidity	20% ~ 90% RH			
Dimensions	165 x 104 x 1.4	145.5 x 188 x 2.1	238.8x 188.7 x 2.6	204 x 268 x 2.1

A.5 Bluetooth Module Specifications

The specifications for the Bluetooth module on the SP-xx00-72 are shown below.

Specification	Bluetooth Module
Standard	Bluetooth v2.0
Frequency Band	2.402GHz~2.480GHz unlicensed ISM band
Modulation Method	GFSK for 1Mbps π/4-DQPSK for 2Mbps 8-DPSK for 3Mbps
Spread Spectrum	FHSS (Frequency Hopping Spread Spectrum)
RF Output Power	Class 2 (under 4dBm)
Antenna Terminal	50 Ohms
DC Power	DC 3.3V or DC 5V
I/O Interface	USB 2.0 interface
Two GPIO Interface	LED link indicator interface
Dimensions	35mm x 11mm
Operating System	Windows XP, Windows 2000, Windows 98SE, Windows Me

Appendix

B

Safety Precautions

**WARNING:**

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the SP-xx00-72 series.

B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the SP-xx00-72 series is opened.
- **Make sure the power is turned off and the power cord is disconnected** whenever the SP-xx00-72 series is being installed, moved or modified.
- **Do not apply voltage levels that exceed the specified voltage range.** Doing so may cause fire and/or an electrical shock.
- **Electric shocks can occur** if the SP-xx00-72 series chassis is opened when the SP-xx00-72 series is running.
- **Do not drop or insert any objects** into the ventilation openings of the SP-xx00-72 series.
- **If considerable amounts of dust, water, or fluids enter the SP-xx00-72 series**, turn off the power supply immediately, unplug the power cord, and contact the SP-xx00-72series vendor.
- **DO NOT:**
 - Drop the SP-xx00-72 series against a hard surface.
 - Strike or exert excessive force onto the LCD panel.
 - Touch any of the LCD panels with a sharp object
 - In a site where the ambient temperature exceeds the rated temperature

B.1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the SP-xx00-72 series may result in permanent damage to the SP-xx00-72 series and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the SP-xx00-72 series. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the SP-xx00-72 series is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- ***Self-grounding:*** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- ***Only handle the edges of the electrical component:*** When handling the electrical component, hold the electrical component by its edges.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the SP-xx00-72 series, please follow the guidelines below.

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the SP-xx00-72 series, please read the details below.

- Except for the LCD panel, never spray or squirt liquids directly onto any other components. To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the SP-xx00-72X series does not require cleaning. Keep fluids away from the SP-xx00-72 series interior.
- Be cautious of all small removable components when vacuuming the SP-xx00-72 series.
- Turn the SP-xx00-72 series off before cleaning the SP-xx00-72 series.
- Never drop any objects or liquids through the openings of the SP-xx00-72 series.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the SP-xx00-72 series.
- Avoid eating, drinking and smoking within vicinity of the SP-xx00-72 series.

B.2.2 Cleaning Tools

Some components in the SP-xx00-72 series may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the SP-xx00-72 series.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the SP-xx00-72 series.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the LSP-xx00-72 series.
- **Using solvents** – The use of solvents is not recommended when cleaning the LSP-xx00-72 series as they may damage the plastic parts.
- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the SP-xx00-72 series. Dust and dirt can restrict the airflow in the SP-xx00-72 series and cause its circuitry to corrode.
- **Cotton swabs** - Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

C

BIOS Configuration Options

C.1 BIOS Configuration Options

Below is a list of BIOS configuration options described in **Chapter 1**.

<input type="checkbox"/>	System Overview	67
<input type="checkbox"/>	System Time [xx:xx:xx]	68
<input type="checkbox"/>	System Date [xx/xx/xx]	68
<input type="checkbox"/>	ATA/IDE Configurations [Compatible]	70
<input type="checkbox"/>	Legacy IDE Channels [PATA Pri, SATA Sec]	71
<input type="checkbox"/>	IDE Master and IDE Slave	71
<input type="checkbox"/>	Auto-Detected Drive Parameters	72
<input type="checkbox"/>	Type [Auto]	73
<input type="checkbox"/>	ZIP	73
<input type="checkbox"/>	LS-120	73
<input type="checkbox"/>	LBA/Large Mode [Auto]	74
<input type="checkbox"/>	Block (Multi Sector Transfer) [Auto]	74
<input type="checkbox"/>	PIO Mode [Auto]	74
<input type="checkbox"/>	DMA Mode [Auto]	75
<input type="checkbox"/>	S.M.A.R.T [Auto]	76
<input type="checkbox"/>	32Bit Data Transfer [Enabled]	76
<input type="checkbox"/>	Serial Port1 Address [3F8/IRQ4]	77
<input type="checkbox"/>	Serial Port1 Mode [Normal]	77
<input type="checkbox"/>	Serial Port3 Address [3E8]	78
<input type="checkbox"/>	Serial Port3 IRQ [11]	78
<input type="checkbox"/>	Serial Port4 Address [2E8]	78
<input type="checkbox"/>	Serial Port4 IRQ [10]	78
<input type="checkbox"/>	CPU FAN Mode Setting [Full On Mode]	79
<input type="checkbox"/>	CPU Temp. Limit of OFF [000]	80
<input type="checkbox"/>	CPU Temp. Limit of Start [020]	80
<input type="checkbox"/>	CPU Fan Start PWM [070]	81
<input type="checkbox"/>	Slope PWM [0.5 PWM]	81
<input type="checkbox"/>	Suspend Mode [S1(POS)]	84
<input type="checkbox"/>	Restore on AC Power Loss [Last State]	84
<input type="checkbox"/>	Power Button Mode [On/Off]	85
<input type="checkbox"/>	Resume on Keyboard/Mouse [Disabled]	85

<input type="checkbox"/> Resume on Ring [Disabled]	85
<input type="checkbox"/> Resume on PCI-Express WAKE# [Enabled]	86
<input type="checkbox"/> Resume On RTC Alarm [Disabled]	86
<input type="checkbox"/> RTC Alarm Date (Days).....	86
<input type="checkbox"/> System Time	86
<input type="checkbox"/> Remote Access [Disabled].....	87
<input type="checkbox"/> Serial Port Number	87
<input type="checkbox"/> Serial Port Mode.....	87
<input type="checkbox"/> Redirection after BIOS POST	87
<input type="checkbox"/> Terminal Type.....	87
<input type="checkbox"/> Serial Port Number [COM1].....	88
<input type="checkbox"/> Base Address, IRQ [3F8h,4].....	88
<input type="checkbox"/> Serial Port Mode [115200 8,n,1].....	88
<input type="checkbox"/> Redirection After BIOS POST [Always]	88
<input type="checkbox"/> Terminal Type [ANSI].....	89
<input type="checkbox"/> USB Functions [Enabled].....	90
<input type="checkbox"/> USB 2.0 Controller [Enabled].....	90
<input type="checkbox"/> Legacy USB Support [Enabled].....	90
<input type="checkbox"/> USB2.0 Controller Mode [HiSpeed]	90
<input type="checkbox"/> IRQ# [Available].....	91
<input type="checkbox"/> DMA Channel# [Available]	92
<input type="checkbox"/> Reserved Memory Size [Disabled]	93
<input type="checkbox"/> Quick Boot [Enabled]	94
<input type="checkbox"/> Quiet Boot [Disabled]	94
<input type="checkbox"/> AddOn ROM Display Mode [Force BIOS]	95
<input type="checkbox"/> Bootup Num-Lock [On]	95
<input type="checkbox"/> Boot From LAN Support [Disabled]	95
<input type="checkbox"/> Change Supervisor Password	96
<input type="checkbox"/> Change User Password	96
<input type="checkbox"/> Memory Hole [Disabled]	98
<input type="checkbox"/> Internal Graphics Mode Select [Enable, 8MB]	98
<input type="checkbox"/> DVMT Mode Select [DVMT Mode].....	99
<input type="checkbox"/> DVMT/FIXED Memory	99
<input type="checkbox"/> Boot Display Device [LFP]	99
<input type="checkbox"/> Sec. Display Device [CRT]	100

<input type="checkbox"/>	LFP Panel Type [by H/W].....	100
<input type="checkbox"/>	Audio Controller [AC'97 Audio Only].....	101
<input type="checkbox"/>	Save Changes and Exit	102
<input type="checkbox"/>	Discard Changes and Exit.....	102
<input type="checkbox"/>	Discard Changes.....	102
<input type="checkbox"/>	Load Optimal Defaults.....	102
<input type="checkbox"/>	Load Failsafe Defaults.....	103

Appendix

D

Watchdog Timer

**NOTE:**

The following discussion applies to DOS environment.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMI or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer:

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. While the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the Watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
;
W_LOOP:

    MOV    AX, 6F02H        ;setting the time-out value
    MOV    BX, 05          ;time-out value is 5 seconds
    INT    15H

;
; ADD THE APPLICATION PROGRAM HERE
;
    CMP    EXIT_AP, 1      ;is the application over?
    JNE    W_LOOP         ;No, restart the application

    MOV    AX, 6F02H      ;disable Watchdog Timer
    MOV    BX, 0          ;
    INT    15H

;
; EXIT ;
```

Appendix

E

Hazardous Materials Disclosure

E.1 Hazardous Material Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	X	O	O	O	O	X
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	X	○	○	○	○	X
显示	X	○	○	○	○	X
印刷电路板	X	○	○	○	○	X
金属螺帽	X	○	○	○	○	○
电缆组装	X	○	○	○	○	X
风扇组装	X	○	○	○	○	X
电力供应组装	X	○	○	○	○	X
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

Index

A

ABS/PC plastic frame 4, 52
ACPI 83, 84
anti-static precautions 30, 59
 anti-static pad 30, 59, 140
 anti-static wristband 30, 59, 140
 handling 30, 60, 140
 self-grounding 30, 59, 140

B

back cover 34, 35, 62
BGA type VI
BIOS .. 66, 67, 68, 69, 70, 71, 72, 73, 77, 78,
 80, 83, 84, 85, 87, 88, 89, 90, 92, 94, 95,
 96, 97, 98, 99, 101, 102, 103
bracket 4, 34, 45, 46, 52, 53, 54
Brightness 135

C

clear CMOS jumper 38
 location 38
 settings 38
CMOS 38
 clear CMOS jumper 38
COM 1/2 pin 9 setting jumper
 location 40
COM 1/3 pin 9 setting jumper
 settings 39

COM 2 function select jumper
 location 41
COM1 pin 9 setting jumper 39
 settings 39
COM3
 COM3 RS-232/422/485 select 43
 COM3 RX function select 41
 COM3 TX function select 42
COM3 pin 9 setting jumper
 settings 39
COM3 pin 9 setting jumper 39
COM3 RS-232/422/485 serial port select
 jumper 43
 location 43
 settings 43
COM3 RX function select jumper 41
 settings 41
COM3 TX function select jumper 42
COM3 TX Function Select jumper
 location 42
 settings 42
Contrast Ratio 135
cooling fan 83

D

DB-9 connector 55

E

electrostatic discharge 30, 59

F

FDD.....	77
FSB.....	71

H

HDD.....	34
----------	----

I

IrDA.....	79
-----------	----

J

jumper.....	36
clear CMOS.....	38
COM3 pin 9 setting jumper.....	39
COM3 RS-232/422/485 serial port select	43
COM3 RX function select.....	41
COM3 TX function select.....	42
jumper configuration.....	36

L

LAN connection.....	54
---------------------	----

M

Memory.....	62
-------------	----

P

panel mounting clamps.....	52, 53
Pixel Pitch.....	135
Power Button Mode.....	86
power switch.....	4

R

Resolution.....	135
RJ-45 connection.....	54
single connector.....	54

S

Safety Precautions.....	139
Serial Device	
connection.....	55
serial port.....	4
SO-DIMM.....	62, 63
system voltages.....	80, 83

T

temperature.....	80
------------------	----

U

USB.....	90, 91
external USB device connection.....	57
USB 2.0.....	4, 91
USB device connection.....	57

single connector57
USB2.091

W

wall 4, 44, 45, 46
wall mounting46
wall-mounting bracket45